Marconi
Instruments

RADIO TEST SYSTEMS for AMPS

2960 and 2960B

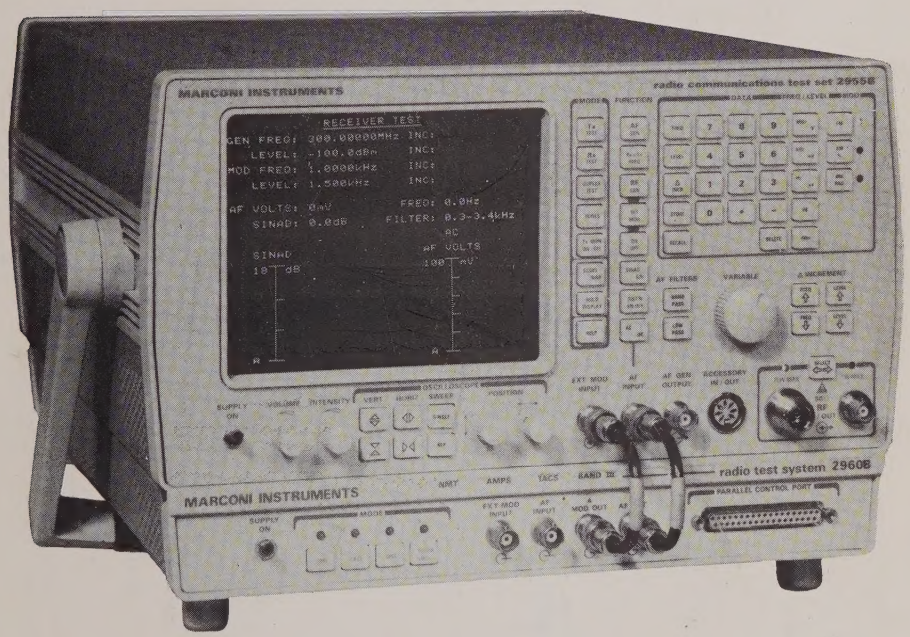

MP MASTER
MA31140

Operating Manual Supplement 20

Digitized by the Internet Archive
in 2026

https://archive.org/details/manualsplus_12570

Operating Manual

H 52960-900R
Volume 1
Supplement 20

RADIO TEST SYSTEMS

2960 and 2960B

Option 20

for AMPS

© Marconi Instruments Ltd. 1988

No part of this book may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, or recorded by any information storage or retrieval system, without permission in writing by Marconi Instruments Ltd.

Printed in the UK

Manual part no. 46881-902F
Issue 13

CONTENTS

Preface

Chapter 1 PERFORMANCE DATA

Chapter 3-0 INTRODUCTION TO OPERATION
Chapter 3-1 OPERATION

ASSOCIATED PUBLICATIONS

Operating Manual	Part no. 46881-900L
Operating Manual Supplements	(See in the Preface.)
Programming Manual	Part no. 46881-930Y
Programming Manual Supplements	(See in the Programming Manual.)
Service Manual, 2960 Adapter	Part no. 46881-911T
Service Manual, 2955A and 2955R	Part no. 46881-954A

PREFACE

The Radio Test Systems 2960 and 2960B consist of a Radio Communications Test Set 2955 series with a Multi-system Adapter. The Adapter includes software for one or more systems. The Adapter can accept up to six co-resident options. Four options are currently available as below.

Features which are common to all of the systems are described in the Operating Manual.

To describe features in which there are differences between systems, there is an Operating Manual Supplement for each system. The Supplement has the same number as the option as follows:-

Option no.	System	Supplement	
		No.	Part no.
10	NMT	10	46881-901J
20	AMPS	20	46881-902F
30	TACS	30	46881-903G
50	Band III	50	46881-905S

This Supplement is for Option 20 (AMPS).

This Manual covers instruments which contain system software version 3 and which were manufactured from May 1991 (i.e. with serial no. prefixes after 132339). If any later version of software affects this Manual, a Change sheet will be supplied. Information on DSAT and DST is not applicable to instruments which were manufactured before May 1991.

Throughout this Manual, references to the 2960 also apply to the 2960B.

AMENDMENT STATUS

Each page bears the date of the original issue or the date and number of the latest amendment. Any changes subsequent to the latest amendment are included on Manual Change sheets coded C1, C2 etc.

WARNINGS AND CAUTIONS

See the common Operating Manual.

Chapter 1

PERFORMANCE DATA

General AMPS system information

In the table below, AMPS is the default setting of the user-defined AMPS system and is specified as a subset of E-AMPS.

System type	Base Tx frequency channel 1	Mobile Tx frequency channel 1	Minimum channel number	Maximum channel number	Channel spacing	Duplex offset (Rx - Tx)
	MHz	MHz			kHz	MHz
E-AMPS	870.030	825.030	1	1023	30	45
N-AMPS	870.030	825.030	1 WIDE	1023 WIDE	30	45
	870.020	825.020	1 BELOW	1023 BELOW	30	45
	870.030	825.030	1 NARROW	1023 NARROW	30	45
	870.040	825.040	1 ABOVE	1023 ABOVE	30	45
AMPS	870.030	825.030	1	666	30	45

N-AMPS BELOW channels are offset from the NARROW channels by -10 kHz,
N-AMPS ABOVE channels are offset from the NARROW channels by +10 kHz.

Allocation of channels

1 to 333: System A.
334 to 666: System B.
667 to 716: System A'.
717 to 799: System B'.
800 to 990: Reserved.
991 to 1023: System A''.

Dedicated control channels

313 to 333: System A.
334 to 354: System B.

Voice deviation FM

Except narrowband: 12.0 kHz maximum.
N-AMPS narrowband: 5.0 kHz maximum.

Data deviation

Except narrowband: 8.0 kHz ±10%.
N-AMPS narrowband: 700 Hz ±10%.

Data type

FSK Manchester encoded, BCH parity.

Data rate

Except narrowband: 10 kbit/s ±1 bit/s.
N-AMPS narrowband: 100 ±0.1 bit/s.

SAT frequencies

5.970, 6.000 and 6.030 kHz.

SAT deviation

2.0 kHz ±10%.

Signalling tone frequency	10.0 kHz ±1 Hz.
Signalling tone deviation	8.0 kHz ±10%.
Signalling tone duration	50 ms, 400 ms or 1.8 s ±10%.
DSAT sequences	2556CBH, 255B2BH, 256A9BH, 25AD4DH, 26AB2BH, 26B2ADH and 2969ABH.
DST sequences	DAA934H, DAA4D4H, DA9564H, DA52B2H, D954D4H, D94D52H and D69654H.
DSAT and DST deviation	(N-AMPS narrowband.) 700 Hz ±10%.
DSAT and DST type	NRZ (DSAT, DST and sync word).
DSAT and DST rate	200 bit/s ±0.2 bit/s.
Other tones	DTMF sent in conversation from mobile by pressing key pad.
Noise measurement filtration	CCITT psophometric.

Mobile transmit power

Power level	Power		
	Class 1	Class 2	Class 3
0	2.82 W	1.12 W	447 mW
1	1.12 W	1.12 W	447 mW
2	447 mW	447 mW	447 mW
3	178 mW	178 mW	178 mW
4	70.8 mW	70.8 mW	70.8 mW
5	28.2 mW	28.2 mW	28.2 mW
6	11.2 mW	11.2 mW	11.2 mW
7	4.47 mW	4.47 mW	4.47 mW
SCM	xx00	xx01	xx10

System parameter settings

System type	As selected. Default E-AMPS.
System identity	5 digits (decimal). Default 00002.
Control channel	0 to 1023. Default 334.
First voice channel	0 to 1023. Default 1.
Last voice channel	0 to 1023. Default 666.
Handoff increment	1 to 1023. Default 333.
SAT frequency	5.970, 6.000 or 6.030 kHz. Default 5.970 kHz.
Digital colour code (DCC)	0, 1, 2 or 3. Default 0.
DSAT colour code (DSCC)	(N-AMPS only.) 0 to 6. Default 0.

Mobile parameter settings

Mobile number (MIN)	Format xxx-xxx-xxxx. Default 000-000-0000.

Display format settings

Display format	SUMMARY or FULL. Default FULL.
Pause	ALWAYS, MANUAL ONLY or ON FAILURE. Default MANUAL ONLY.
Number format	HEXADECIMAL, DECIMAL, OCTAL, STANDARD 1 or STANDARD 2. Default STANDARD 1.

Test sequence settings

Test sequence	BRIEF TESTING, COMPREHENSIVE TESTING, CALL PROCESSING ONLY, CALL AND RF TESTING or NO SEQUENCE DEFINED (user-defined sequence until the title is reset). Default BRIEF TESTING.
DTMF	ENABLED or DISABLED. Default DISABLED.
Hook flash	ENABLED or DISABLED. Default DISABLED.

Printer settings

Printer port	UNASSIGNED, GPIB, RS-232 or PARALLEL. Default UNASSIGNED.
Print	OFF, ALL, ON FAILURE or ON PASS. Default OFF.
Terminate	<CR> and <LF>, <LF> or <CR>. Default <LF> and <CR>.

Interface settings

Baud rate	75, 150, 300, 600, 1200, 2400, 4800 or 9600. Default 1200.
Length/parity	7/EVEN, 7/ODD, 7/NONE, 8/EVEN, 8/ODD or 8/NONE. Default 8/NONE.
Stop bits	1 or 2. Default 1.
GPIB address	01 to 30. Default 06.

Test sequences

CALL PROCESSING ONLY

REGISTRATION, Test routine no. 20.
CALL MS TO CELL, Test routine no. 22.
Repeated if failed first time.
The following three are omitted if failed second time.
DTMF TONES, Test routine no. 30 (if enabled).
HOOK FLASH, Test routine no. 31 (if enabled).
CLEAR FROM MS, Test routine no. 27.
CALL CELL TO MS, Test routine no. 21.
Repeated if failed first time.
AUTO HANDOFF, Test routine no. 24 (with N-AMPS channel rotation when applicable).
CLEAR FROM CELL, Test routine no. 26.
Print summary.

CALL AND RF TESTING — This can be used as a quick test when only an RF connection can be made.

REGISTRATION, Test routine no. 20.
CALL MS TO CELL, Test routine no. 22.
Repeated if failed first time.
The following three are omitted if failed second time.
DTMF TONES, Test routine no. 30 (if enabled).
HOOK FLASH, Test routine no. 31 (if enabled).
CLEAR FROM MS, Test routine no. 27.
CALL CELL TO MS, Test routine no. 21.
Repeated if failed first time.
The following are repeated as many times as necessary to satisfy the channel settings in the system parameters menu (i.e. from the first voice channel to the last voice channel incrementing by the handoff increment with N-AMPS channel rotation when applicable).
HANDOFF, Test routine no. 23.
Skip on to end if failed.
TX POWER, Test routine no. 28 (power level 0).
TX FREQUENCY, Test routine no. 2.
SAT or DSAT DEVIATION, Test routine no. 25.
After the above have been repeated as necessary -
CLEAR FROM CELL, Test routine no. 26.
Print summary.

BRIEF TESTING

REGISTRATION, Test routine no. 20.
CALL MS TO CELL, Test routine no. 22.
Repeated if failed first time.
The following three are omitted if failed second time.
DTMF TONES, Test routine no. 30 (if enabled).
HOOK FLASH, Test routine no. 31 (if enabled).
CLEAR FROM MS, Test routine no. 27.
CALL CELL TO MS, Test routine no. 21.
Repeated if failed first time.
The following are repeated three times from the first voice channel to the last voice channel incrementing by the handoff increment with N-AMPS channel rotation when applicable).
HANDOFF, Test routine no. 23.
Skip on to try next channel if failed.
SAT or DSAT DEVIATION, Test routine no. 25.
SAT FREQUENCY, Test routine no. 25 (wideband channel only).
TX POWER, Test routine no. 28 (all levels).
TX FREQUENCY, Test routine no. 2.
TX DISTORTION, Test routine no. 3.
TX LIMITING, Test routine no. 4.
RX DISTORTION, Test routine no. 6.
RX SENSITIVITY, Test routine no. 7.
After the above have been repeated three times -
Print results.
CLEAR FROM CELL, Test routine no. 26.
Print summary.
The results are printed in a tabular form annotated LOW CHANNEL, MID CHANNEL and HIGH CHANNEL. Three channels are always tested, regardless of the handoff increment etc.

COMPREHENSIVE TESTING

REGISTRATION, Test routine no. 20.
CALL MS TO CELL, Test routine no. 22.
Repeated if failed first time.
The following three are omitted if failed second time.
DTMF TONES, Test routine no. 30 (if enabled).
HOOK FLASH, Test routine no. 31 (if enabled).
CLEAR FROM MS, Test routine no. 27.
CALL CELL TO MS, Test routine no. 21.
Repeated if failed first time.
BIT ERROR RATE, Test routine no. 29 (wideband channel only).
The following are repeated as many times as satisfies the channel settings in the systems parameters menu (i.e. from the first voice channel to the last voice channel incrementing by the handoff increment with N-AMPS channel rotation when applicable).
HANDOFF, Test routine no. 23.
Skip on to end if failed.
SAT or DSAT DEVIATION, Test routine no. 25.
SAT FREQUENCY, Test routine no. 25 (wideband channel only).
TX POWER, Test routine no. 28 (power level 7).
DC POWER, Test routine no. 9.
TX POWER, Test routine no. 28 (power level 6).
DC POWER, Test routine no. 9.
TX POWER, Test routine no. 28 (power level 5).
DC POWER, Test routine no. 9.
TX POWER, Test routine no. 28 (power level 4).
DC POWER, Test routine no. 9.
TX POWER, Test routine no. 28 (power level 3).
DC POWER, Test routine no. 9.
TX POWER, Test routine no. 28 (power level 2).
DC POWER, Test routine no. 9.
TX POWER, Test routine no. 28 (power level 1).
DC POWER, Test routine no. 9.
TX POWER, Test routine no. 28 (power level 0).
DC POWER, Test routine no. 9.
TX FREQUENCY, Test routine no. 2.
TX DISTORTION, Test routine no. 3.
TX NOISE, Test routine no. 3 (wideband channel only).
TX LIMITING, Test routine no. 4.
TX COMPRESSION, Test routine no. 5.
RX DISTORTION, Test routine no. 6.
RX SENSITIVITY, Test routine no. 7.
RX EXPANSION, test routine no. 8.
After the above have been repeated as necessary -
CLEAR FROM CELL, Test routine no. 26.
DC POWER (quiescent), Test routine no. 9.
Print summary.

Non-system specific test routines

Test routine no. 1	Transmitter RF power (TX POWER)
Reference power:	3 W.
Maximum error:	2 dB.
Test routine no. 2	Transmitter RF frequency (TX FREQUENCY)
Reference frequency	As currently selected channel.
Maximum error	Except N-AMPS narrowband: 2.2 kHz. N-AMPS narrowband: 0.9 kHz.
Test routine no. 3	Transmitter AF distortion (TX SINAD)
Filtration	0.3 to 3.4 kHz.
Lower limit	26 dB.
Standard modulation level	Except N-AMPS narrowband: 8.0 kHz. N-AMPS narrowband: 3.0 kHz.
Test routine no. 4	Transmitter modulation limiting (TX LIMITING)
Upper limit	Except N-AMPS narrowband: 12.0 kHz. N-AMPS narrowband: 5.0 kHz.
Overload factor	20 dB.
Standard modulation level	Except N-AMPS narrowband: 8.0 kHz. N-AMPS narrowband: 3.0 kHz.
Test routine no. 5	Transmitter modulation compression (TX COMPRESSION)
Compression ratio	2 : 1.
Maximum error	10%.
Standard modulation level	Except N-AMPS narrowband: 2.9 kHz. N-AMPS narrowband: 1.5 kHz.

Test routine no. 6	Receiver AF distortion (RX SINAD)
Filtration	Psophometric C-message weighting.
Lower limit	26 dB.
RF generator level	-80 dBm.
Standard modulation level	Except N-AMPS narrowband: 8.0 kHz. N-AMPS narrowband: 3.0 kHz.
Test routine no. 7	Receiver sensitivity (RX SENSITIVITY)
Filtration	Psophometric C-message weighting.
Upper RF level limit	-116 dBm.
Reference SINAD	12dB.
Standard modulation level	Except N-AMPS narrowband: 8.0 kHz. N-AMPS narrowband: 3.0 kHz.
Test routine no. 8	Receiver demodulation expansion (RX EXPANSION)
Expansion ratio	2 : 1.
Maximum error	10%.
Standard modulation level	Except N-AMPS narrowband: 2.9 kHz. N-AMPS narrowband: 1.5 kHz.
Test routine no. 9	DC power consumption (DC POWER)
Upper limit	100 W.
Lower limit	200 mW.
Test routines nos. 10 to 19	(Not implemented.)

System specific test routines

Test routine no. 20	Registration of mobile on control channel (REGISTRATION)
RF generator level	-40, -60 or -80 dBm. Default -40 dBm.
Test routine no. 21	Call placement from cell to mobile (CALL CELL TO MS)
RF generator level	-40, -60 or -80 dBm. Default -40 dBm.
Parallel control port	Answer call (bit 3 = 1).
Initial VC assignment	(N-AMPS only.) WIDE, NARROW, BELOW or ABOVE.
Test routine no. 22	Call placement from mobile to cell (CALL MS TO CELL)
RF generator level	-40, -60 or -80 dBm. Default -40 dBm.
Parallel control port	Place call (bit 1 = 1).
Initial VC assignment	(N-AMPS only.) WIDE, NARROW, BELOW or ABOVE.
Test routine no. 23	Handoff from current to chosen voice channel (HANDOFF)
SAT colour code	Rotated with each handoff to a wideband channel (i.e. 0 to 1, 1 to 2 and 2 to 0).
DSAT colour code	Rotated with each handoff to a narrowband channel (i.e. 0 to 1, 1 to 2 etc and 6 to 0).
VC assignment	(N-AMPS only.) WIDE, NARROW, BELOW or ABOVE.

Test routine no. 24	Automatic handoffs from first to last voice channel (AUTO HANDOFF)
SAT colour code	Rotated with each handoff to a wideband channel (i.e. 0 to 1, 1 to 2 and 2 to 0).
DSAT colour code	Rotated with each handoff to a narrowband channel (i.e. 0 to 1, 1 to 2 etc and 6 to 0).
VC assignment	(N-AMPS only.) WIDE, NARROW, BELOW or ABOVE.
Test routine no. 25	SAT or DSAT transponding (TRANSPONDED SAT or TRANSPONDED DSAT)
Reference deviation	SAT: 2.0 kHz. DSAT: 700 Hz.
SAT reference frequency	As SAT colour code (i.e. 0 = 5.970 kHz, 1 = 6.000 kHz and 2 = 6.030 kHz).
Maximum error	20%.
Test routine no. 26	Clearing down from cell (CLEAR FROM CELL)
Test routine no. 27	Clearing down from mobile (CLEAR FROM MS)
Parallel control port	End call (bit 2 = 1).
Test routine no. 28	Mobile transmitter RF power (TX POWER)
Power level	0 to 7. (See under 'General AMPS system information'.)
Upper limit	+2 dB.
Lower limit	-4 dB.
Test routine no. 29	Data performance (BIT ERROR RATE)
Lower limit	95% of audit orders confirmed by mobile.
RF generator level	-113 dBm.
Test routine no. 30	DTMF tones (DTMF TONES)
Summary line	Scroll (if disabled).

Test routine no. 31	Hook flash (HOOK FLASH)
Summary line	Scroll (if disabled).
Test routine no. 32	Data deviation (DATA DEVIATION)
	(Not applicable to N-AMPS narrowband channel.)
Nominal deviation	8.0 kHz.
Maximum error	10%.
Test routine no. 33	Signalling tone deviation (ST DEVIATION)
	(Not applicable to N-AMPS narrowband channel.)
Nominal deviation	8.0 kHz.
Maximum error	10%.
Test routine no. 34	Signalling tone duration (ST DURATION)
	(Not applicable to N-AMPS narrowband channel.)
Nominal duration	Dependent on preceding tests. 50 ms for Handoff. 400 ms for Hook flash. 1.8 s for a Clear down.
Maximum error	10%.

Manual test operation

Channel selection	0 to 1023. (Channnels 800 to 990 are mapped below channel 991.)
SAT frequency setting	3 to 8 kHz. (Hardware resolution 5 Hz.)
SAT level	0 to 2.5 kHz. (Hardware resolution nominally 12 Hz.)
DSAT and DST level	0 to 1.0 kHz. (Hardware resolution nominally 5 Hz.)
Data level	0 to 10 kHz. (Hardware resolution nominally 47 Hz.)
DSAT data (DSCC) selection	0 to 6.
Non-conversation operating modes	DATA OFF, SIGNAL TONE, DOTTING, FCC, REGISTRATION, PAGE MOBILE, PLACE CALL, DIRECTED RETRY, NEW ACCESS CHANNEL and OVERLOAD CLASS.
Conversation operating modes	CONVERSATION, HANDOFF, POWER LEVEL and CLEAR DOWN.
Audio paths for use with 2955 mode	RX (AF input), RX x20 (AF input amplified with a gain of 20) and TX (demodulated signal from Adapter).
SAT, DSAT or DST measurement	Deviation is measured while SAT, DSAT or DST is being displayed. Otherwise, the reading is frozen. Update rate is every 6 seconds if DC voltage is >1 V. Otherwise, it is every 2 seconds.
ST or DST indication	When a signalling tone is being received, ST or DSAT is displayed.
DTMF tones	Up to 16 tones are displayed. More than 16 causes the display to scroll.
DC power	DC voltage, current and calculated power indicated when the DC level is >1 V.

Chapter 3-0

INTRODUCTION TO OPERATION

CHAPTERS

As the 2960 is so versatile, operation is covered in three chapters as follows:-

(a) Chapter 3-0. This introductory chapter.

(b) Chapter 3-1. This covers local operation by using the controls on the 2955 and on the Adapter.

(c) Chapter 3-2. This covers remote control using the GPIB interface port or the RS-232 serial interface port.

The Programming Manual covers programming for remote control and to enable the user to define his own test sequences and to define parameters in test routines for local control.

INTERCONNECTIONS

Start by connecting the radio under test to the 2960 as described on page 3-1-3.

STARTING

When you switch on, the normal RECEIVER TEST display appears. See Fig. 3-2. Press the CRTS key on the Adapter. Initializing and self testing take place as shown on the display. See Fig. 3-3. When this is completed, the main top level menu appears. See Fig. 3-4.

If your instrument is fitted only with the AMPS system option or if AMPS is shown in the display title, press the FULL AUTO TEST soft key. Otherwise, select the system as described on page 3-1-9.

When you have pressed the FULL AUTO TEST key, the FULL AUTO TEST intermediate display appears. See Fig. 3-6. If the parameters which are shown on this display exactly match the needs of your radio, you can carry on by pressing the START TEST key.

These top level menus and options are summarized in Table 3-1.

CHANGING FORMAT

If the system parameters do not match the radio under test, press the CHANGE FORMAT soft key. The **CHANGE FORMAT MENU** appears. See Fig. 3-7. This leads you to a series of menus so that you can alter any of these parameters. These menus are summarized in Table 3-2.

For full details, see pages 3-1-10 to 3-1-25.

TABLE 3-1 TOP LEVEL MENUS AND OPTIONS FOR AMPS

Menu	Option	Menu	Option	Page
Main				3-1-8
	GO/NO-GO TEST			3-1-28
	FULL AUTO TEST	Intermediate		3-1-10
			START TEST	3-1-29
			CHANGE FORMAT	3-1-10
	MANUAL TEST			3-1-34
	SELECT SYSTEM			3-1-9

FULL AUTO TEST

When you start this test, the 2960 automatically performs the test routines which make up a test sequence. The test sequence is built-in or user-defined and is selected from the **CHANGE FORMAT MENU**.

For full details, see pages 3-1-29 and 3-1-30.

GO/NO-GO TEST

This is similar to the FULL AUTO TEST but it provides only summarized results for each test routine.

For full details, see page 3-1-28.

MANUAL TEST

When you select this mode, you are given the choice of a number of manual tests which can be made. This is useful for trouble-shooting and fault-finding.

For full details, see pages 3-1-34 to 3-1-38.

TEST SEQUENCES

The FULL AUTO TEST and the GO/NO-GO TEST consist of a number of test routines which are combined into built-in or user-defined test sequences.

For full details, see pages 3-1-39 and 3-1-40.

TEST ROUTINES

Each test routine is carried out automatically. There is a choice of eighteen test routines which are combined in the four built-in test sequences and which are available for user-defined test sequences.

For full details, see pages 3-1-41 to 3-1-56.

TABLE 3-2 CHANGE FORMAT MENUS FOR AMPS

Menu	Option	Menu	Option	Page
SYSTEM PARAMETERS				3-1-11
	SYSTEM TYPE			3-1-13
		SYSTEM DEFINITION		3-1-14
			SYSTEM TITLE	3-1-15
			LOWEST CHANNEL	3-1-15
			HIGHEST CHANNEL	3-1-15
			TX BASE FREQUENCY	3-1-15
			DUPLEX OFFSET	3-1-16
			CHANNEL SPACING	3-1-16
			MEAN DATA DEVIATION	3-1-16
			SAT DEVIATION	3-1-16
	SYSTEM ID			3-1-13
	CONTROL CHANNEL			3-1-13
	VOICE CHANNEL			3-1-13
	HANDOFF INCREMENT			3-1-14
	SAT FREQUENCY			3-1-14
	DCC			3-1-14
	DSCC			3-1-14
MOBILE PARAMETERS				3-1-17
	MOBILE NUMBER			3-1-17
DISPLAY FORMAT				3-1-17
	DISPLAY FORMAT			3-1-18
	PAUSE			3-1-18
	NUMBER FORMAT			3-1-18
TEST SEQUENCE				3-1-19
	BRIEF TESTING			3-1-40
	COMPREHENSIVE TESTING			3-1-40
	CALL PROCESSING ONLY			3-1-39
	CALL AND RF TESTING			3-1-39
	User-defined test sequence			
	DTMF			3-1-19
	HOOK FLASH			3-1-19
PRINTER				3-1-20
	PRINTER PORT			3-1-20
	PRINT			3-1-20
	TERMINATE			3-1-20
INTERFACE				3-1-21
	BAUD RATE			3-1-22
	LENGTH/PARITY			3-1-22
	STOP BITS			3-1-22
	GPIB ADDRESS			3-1-22
MISCELLANEOUS				3-1-22
	DE-MOD SOURCE			3-1-23
	DISC STEP RATE			3-1-23
	PRINTER PORT COMMAND			3-1-23
	SYSTEM CONFIGURATION			3-1-23
EDIT COMMAND				3-1-25
SYSTEM PARAMETER WORD 2				3-1-26

Chapter 3-1

OPERATION

OPERATING SUMMARY

The 2960 is used to test a cellular or trunked mobile radio by simulating the functions of a cell base station.

Any one of the following test modes can be used:-

(a) GO/NO-GO TEST. See page 3-1-28.
(b) FULL AUTO TEST. See page 3-1-29.
(c) MANUAL TEST. See page 3-1-34.

For the FULL AUTO TEST, the display is in one of the following forms:-

(a) SUMMARY DISPLAY. See page 3-1-28.
(b) FULL DISPLAY. See page 3-1-29.

These are selectable from a menu. With FULL DISPLAY, the top half of the display is the 2955's normal **DUPLEX** test display. The bottom half shows the title, the status and the result of the current test routine. SUMMARY DISPLAY is always selected for the GO/NO-GO TEST mode and it can be selected for the FULL AUTO TEST mode. The SUMMARY DISPLAY shows only the title, the status and the result of the current test routine. Passed test routines scroll up and off the screen; failed test routines remain at the top of the screen.

The 2960 contains four built-in test sequences as follows:-

(a) CALL PROCESSING ONLY. See page 3-1-39.
(b) CALL AND RF TESTING. See page 3-1-39.
(c) BRIEF TESTING. See page 3-1-40.
(d) COMPREHENSIVE TESTING. See page 3-1-40.

Each of the test sequences consists of a number of test routines. Eighteen test routines are available. There are two groups - non-system specific test routines as shown in Table 3-4 and system specific test routines as shown in Table 3-5. The non-system specific test routines are applicable to any cellular or trunked radio system but these system specific test routines are applicable only to AMPS.

With the MULTI-AMPS option, different AMPS systems (E-AMPS and N-AMPS) can be selected. In addition, the user can define his own system with its own system title, channel numbers, transmitter base frequency, duplex offset, channel spacing, mean data deviation and SAT deviation.

TABLE 3-4 NON-SYSTEM SPECIFIC TEST ROUTINES

Test routine no.	Parameter
1	Transmitter RF power.
2	Transmitter RF frequency.
3	Transmitter AF distortion and SINAD.
4	Transmitter modulation limiting.
5	Transmitter modulation compression.
6	Receiver AF distortion and SINAD.
7	Receiver sensitivity.
8	Receiver demodulation expansion.
9	DC power consumption.
10 to 19	(Not implemented.)

TABLE 3-5 SYSTEM SPECIFIC TEST ROUTINES (AMPS)

Test routine no.	Parameter
20	Registration.
21	Call from cell to mobile.
22	Call from mobile to cell.
23	Handoff.
24	Automatic handoff.
25	SAT transponding.
26	Clearing down from cell.
27	Clearing down from mobile.
28	Mobile TX power.
29	Data performance.
30	DTMF tones.
31	Hook flash.
32	Data deviation.
33	ST deviation.
34	ST duration.
35 to 39	(Not implemented.)

The menus which allow the user to define all the parameters are accessed by selecting FULL AUTO TEST on the top level menu. The succeeding menu gives the option CHANGE FORMAT. Pressing this soft key brings up two pages of CHANGE FORMAT MENU which enables the user to change parameters from the following:-

(a) SYSTEM PARAMETERS MENU.
(b) MOBILE PARAMETERS MENU.
(c) DISPLAY FORMAT MENU.
(d) TEST SEQUENCE MENU.
(e) PRINTER MENU.
(f) INTERFACE MENU.
(g) MISCELLANEOUS MENU.

Six memories are available for storing six full sets of parameters.

A printer can be connected to the GPIB port (with the printer in listen-only mode), the RS-232 port (serial printer) or to the parallel control port (parallel printer). The printer can print either a summary of the test routines performed or only the passes or failures as they occur.

A disc drive can be connected to the Adapter using the connector on the right-hand side. The drive has to be compatible with the Shugart S.400 interface and may be 3.5 or 5.25 inch, 40 or 80 track. Discs can be single-sided or double-sided although only 40 track on one side are used.

During the FULL AUTO TEST mode, the test sequence can be halted by use of the PAUSE key. A menu is provided to allow the user to define when the selected test sequence should halt. See page 3-1-18. Options available are as follows:-

(a) Pause after each test routine.
(b) Pause by manual use of the PAUSE key.
(c) Pause when failure occurs in a test routine.

INTERCONNECTIONS

For audio tests, it may be necessary for the user to construct an interface unit. The unit has to be compatible with the radio under test and with the 2955's AF output and the Adapter's AF input requirements. The unit is typically connected between the radio's handset and its transceiver unit to provide suitable unbalanced connections from the microphone to the 2955's AF GEN OUTPUT socket and the earphone to the Adapter's AF INPUT socket.

Bearing in mind that the radio and test interface connections are likely to vary between manufacturers, connect the 2960 to the radio under test, as shown in Fig. 3-1, as follows:-

(1) Connect the 2955's RF IN/OUT N socket to the transceiver's antenna connector. This is required for all tests.

(2) Connect the 2955's AF GEN OUTPUT socket and the Adapter's AF INPUT socket to the audio test interface unit. This is required for the BRIEF TESTING and the COMPREHENSIVE TESTING sequences.

(3) Connect the radio's DC power input leads to its DC supply using the Adapter's DC in/out connectors - the radio to the right-hand pair and the supply to the left-hand pair. These connections are only required for measuring the radio's input power in the COMPREHENSIVE TESTING sequence or in the MANUAL TEST mode. Otherwise, the radio can be connected directly to its power supply.

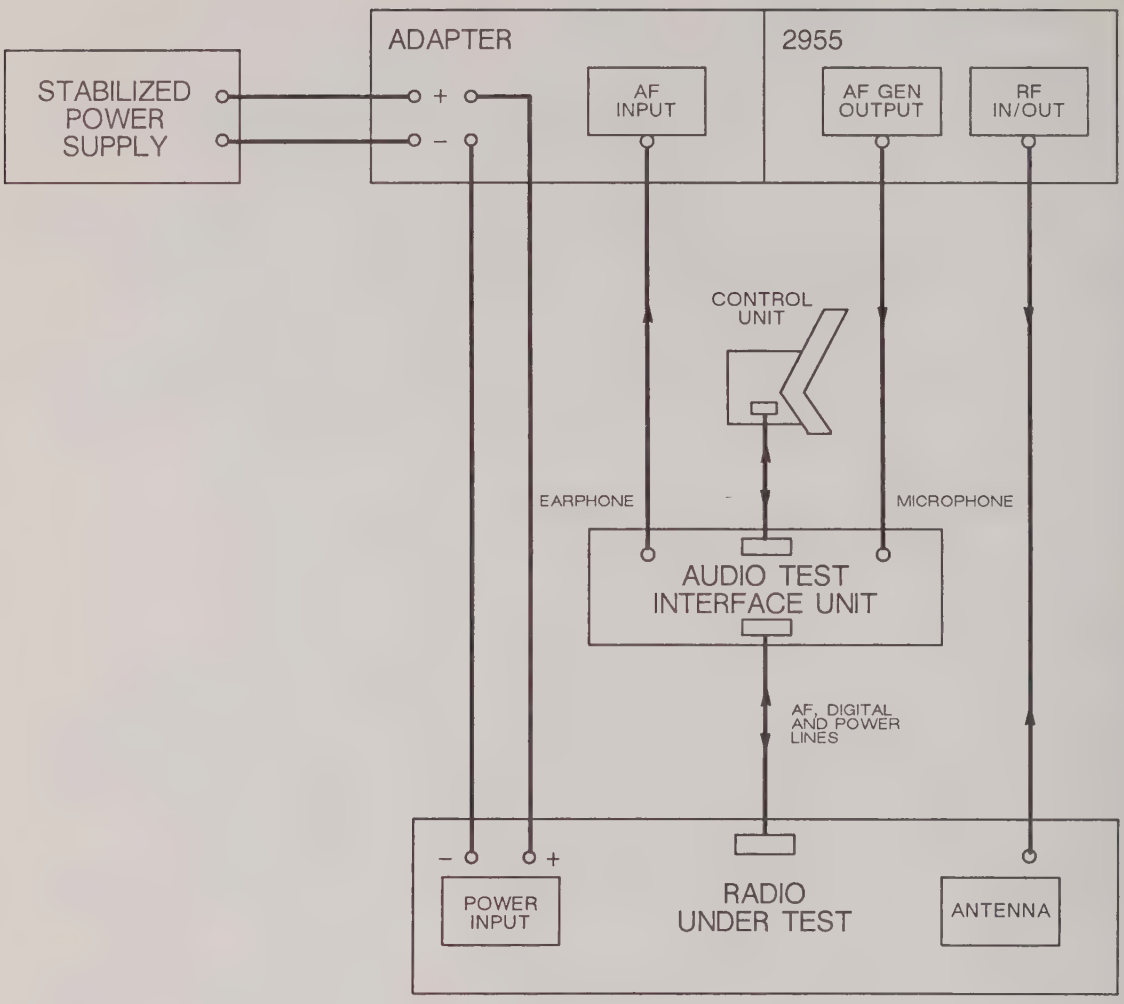

Fig. 3-1 Interconnections

CRTS MODE

Proceed as follows:-

(1) Switch on both the 2955 and the Adapter. (There is no particular order of switching on). All four LEDs on the Adapter light and then three go out after a pause. The LED remains lit above the 2955 key. The **RECEIVER TEST** display appears on the screen as shown in Fig. 3-2. If one or more LEDs flash, this indicates a fault condition. (See 'Conditions indicated by LEDs' below).

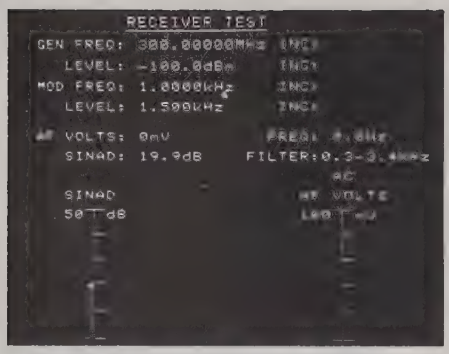

Fig. 3-2 Display following switch-on

(2) Press the CRTS key. The display changes to **AMPS CELLULAR RADIO TEST SYSTEM** as shown in in Fig. 3-3. The 2960 performs a series of self tests which include self calibration. For each self test, a line appears on the display and, if passed, is replaced by the next one. When a failure occurs, the CONTINUE key appears together with an appropriate message.

(3) To retain the display line for a test and subsequent tests, press the TX TEST key during that test. This effect is cancelled when the TX TEST key is pressed again.

Occasionally, the instrument may indicate a failure. This could be caused by a genuine fault or could be due to some other reason. Some examples are as follows:-

(a) An active radio is attached to the 2955 series Test Set during calibration.

(b) One or more link leads is missing, incorrectly fitted or defective.

(c) A signal is applied to the EXT MOD INPUT socket during calibration.

(d) There is a failure during self calibration because of sporadic mistiming.

When there is a failure during self calibration, the instrument assumes default calibration settings. This ensures normal operation of the other areas of the instrument.

Self calibration routines have been optimized for speed based on typical performances of Adapters and 2955 series Test Sets. Occasionally, calibration may not be completed correctly because of noise effects, temperature variation and digital offsets. When a failure is indicated, press the TX TEST key to repeat the self test and calibration. If the repeat is satisfactory, there is no further cause for concern.

If failures occur repeatedly, this would indicate a problem. Contact your service agent for further advice.

At the end of the self tests, part numbers for the Adapter's motherboard and personality board software and the hardware serial number are given. During the self tests, software version numbers are displayed for the motherboard, the personality board and the 2955.

When the self tests are successfully completed, the main top level menu appears on the screen. This menu is the starting point for selecting the various test functions.

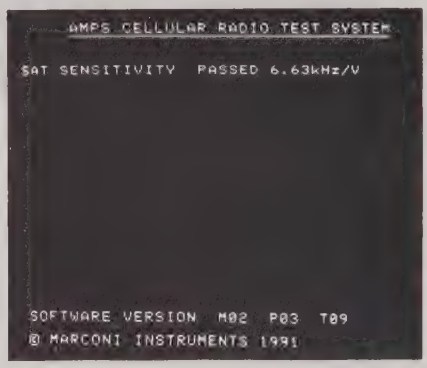
AMPS CELLULAR RADIO TEST SYSTEM
SAT SENSITIVITY PASSED 6.63kHz/V
SOFTWARE VERSION M02 P03 T09
© MARCONI INSTRUMENTS 1991

Fig. 3-3 Display following CRTS mode selection

Note...

If the message MEMORY CORRUPTED appears, it means that the settings used when the 2960 was last switched on have been lost. They are replaced by the default settings.

Conditions indicated by LEDs

When one or more of the LEDs on the Adapter flashes, it indicates a failure to successfully enter the required mode or that there is an error condition. The various conditions are summarized in Table 3-6.

TABLE 3-6 LED INDICATIONS

LEDs	Condition	Meaning
All on	At power on	Test function - LEDs should go out after a pause
All flashing	At power on	Volatile RAM failure - instrument cannot continue
2955 flashing	At power on	2955 is not responding on private GPIB - instrument cannot continue until fault is rectified
CRTS flashing	At power on	ROM checksum failure - instrument continues when an Adapter key is pressed if it can
	After power on	CRTS has been selected but 2955 is not responding or is set to talk only mode
DISC flashing	At power on	Non-volatile RAM checksum failure - instrument continues and resets memory to default data when an Adapter key is pressed
	After power on	DISC has been selected but the 2955 is not responding or is set to talk only mode
PSOPH flashing	At power on	System option ROM checksum failure - instrument continues when an Adapter key is pressed if it can

Self test failure messages

When a failure occurs during self testing, an appropriate message is displayed.

For each source of error, a bit is set in an error byte which can be read in remote control by using the command RD56.

MAIN TOP LEVEL MENU

An option is selected from a menu by pressing the blue MODE key which is alongside the function shown on the screen. These soft key functions over-ride the normal function of the keys when a menu appears on the screen.

The main top level menu is the menu from which the test modes are selected. See Fig. 3-4. The options are as follows:-

(a) GO/NO-GO TEST. This is a special version of the FULL AUTO TEST mode which provides a quick appraisal of the unit under test. The display format is SUMMARY and the pause is MANUAL ONLY. All other parameters are as specified in FULL AUTO TEST including the test sequence (e.g. COMPREHENSIVE TESTING).

(b) FULL AUTO TEST. This executes a preselected test sequence, either one of the four built-in test sequences or a user-defined test sequence. It is intended for main routine testing. It provides access to the two pages of the **CHANGE FORMAT MENU** which are used to define the test parameters and instrument settings.

(c) MANUAL TEST. This provides the user with a number of individual call processing tests as well as manual control of the data and SAT generators. It would normally be used for trouble shooting and repair work.

(d) SELECT SYSTEM. This option is displayed when the 2960 is fitted with more than one of the system options. It provides access to the **SYSTEM SELECTION MENU**.

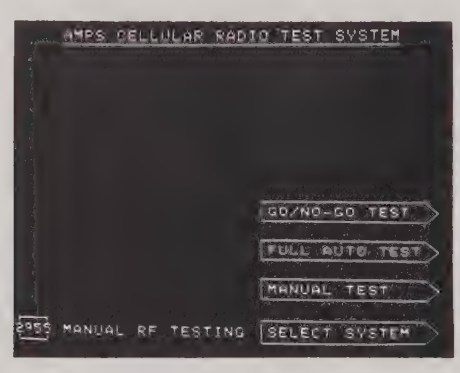

Fig. 3-4 Main top level menu

Pressing the CRTS key aborts the current test and returns to the main top level menu.

The 2955 and DISC keys provide the following additional facilities:-

(a) 2955 manual RF testing. Pressing the 2955 key allows the user to manually test the RF and audio stages of a mobile. When the 2955 key is pressed, the 2955's **DUPLEX** test display appears. The display and the test settings are saved as indicated by the LED above the CRTS key. The normal 2955 operating mode can be accessed by pressing the 2955 key a second time.

(b) Disc facility. Pressing the DISC key allows the user to control a disc drive so that test sequences can be stored and retrieved from a floppy disc without the need for an external controller.

SYSTEM SELECTION MENU

This menu allows the user to select which of the system options is to be used. There is a soft key for each of the system options which is fitted. The current system option is shown by an asterisk. See Fig. 3-5.

To change the system, press the appropriate SELECT key twice. Initializing then takes place and the main top level menu is restored, showing the new system. Also, this is then the current system at the next switch-on. Pressing the RETURN soft key restores the main top level menu.

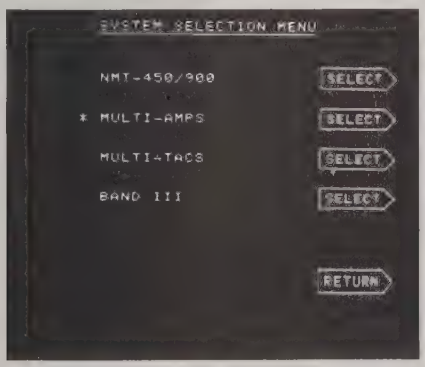

Fig. 3-5 SYSTEM SELECTION MENU

FIRST TIME OPERATION

When the instrument is used for the first time, the test settings have to be defined and selected by means of the **CHANGE FORMAT MENU**. To access this menu, first press the FULL AUTO TEST key. The FULL AUTO TEST intermediate display appears as shown in Fig. 3-6. This shows the main test settings currently selected. It also gives the options of CHANGE FORMAT to select the settings or START TEST to commence testing (once the settings have been defined). Press the CHANGE FORMAT key to obtain the **CHANGE FORMAT MENU**.

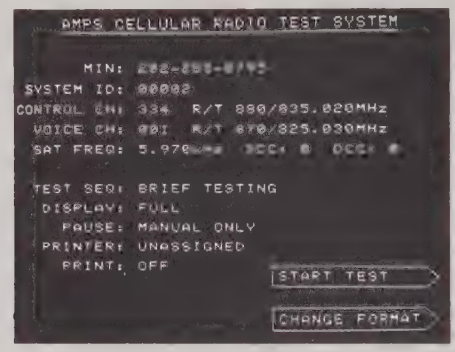

Fig. 3-6 FULL AUTO TEST intermediate display

CHANGE FORMAT MENU

This menu allows the user to define and select test settings before testing is carried out. The current settings are stored in non-volatile memory. This menu is accessed when FULL AUTO TEST is selected from the main top level menu and then CHANGE FORMAT is selected from the FULL AUTO TEST display. The **CHANGE FORMAT MENU** consists of two pages of options to change settings or format display as shown in Fig. 3-7.

Page 1 allows changes to be made under the following options:-

(a) **SYSTEM PARAMETERS MENU**. See page 3-1-11.
(b) **MOBILE PARAMETERS MENU**. See page 3-1-17.
(c) **DISPLAY FORMAT MENU**. See page 3-1-17.
(d) **TEST SEQUENCE MENU**. See page 3-1-19.

Pressing PAGE 2 selects the other page of the menu; RETURN restores the FULL AUTO TEST display.

Page 2 allows changes to be made under the following options:-

(a) **PRINTER MENU**. See page 3-1-20.
(b) **INTERFACE MENU**. See page 3-1-21.
(c) **MISCELLANEOUS MENU**. See page 3-1-22.

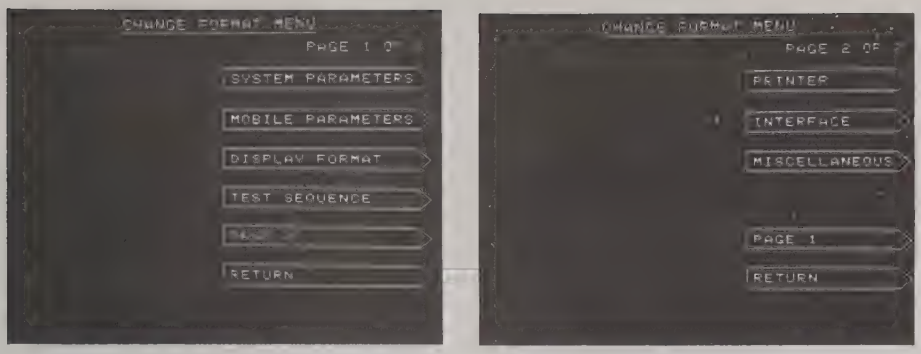

Fig. 3-7 **CHANGE FORMAT MENU** pages 1 and 2

Pressing PAGE 1 selects the other page of the menu; RETURN restores the intermediate menu.

OPTION KEYS

Some of the option keys are marked SELECT and some are marked CHANGE.

A SELECT key has to be pressed repeatedly to scroll through the choices until the required setting is obtained.

A CHANGE key has to be pressed once and then it changes to ENTER. The numerical setting can be then changed by entering a new value on the 2955 keypad. If a mistake is made, press the DELETE key then press the correct key. Any change can be aborted by pressing any other soft key. If the entry is correct, press the ENTER key and then it changes back to CHANGE. If a mistake is now found in the data, the number has to be re-entered after pressing CHANGE.

SYSTEM PARAMETERS MENU

This menu allows the user to change parameters. There are two pages of options as shown in Fig. 3-8a and Fig. 3-8b.

Page 1 allows changes to be made under the following options:

(a) SYSTEM TYPE.
(b) SYSTEM ID.
(c) CONTROL CHANNEL.
(d) VOICE CHANNEL.
(e) HANDOFF INCREMENT.

Pressing PAGE 2 selects the other page of the menu; RETURN restores the **CHANGE FORMAT MENU**.

Page 2 allows changes to be made under the following options:

(a) SAT FREQ.
(b) DCC.
(c) DSCC (N-AMPS only).

Pressing PAGE 1 selects the other page of the menu; RETURN restores the **CHANGE FORMAT MENU**.

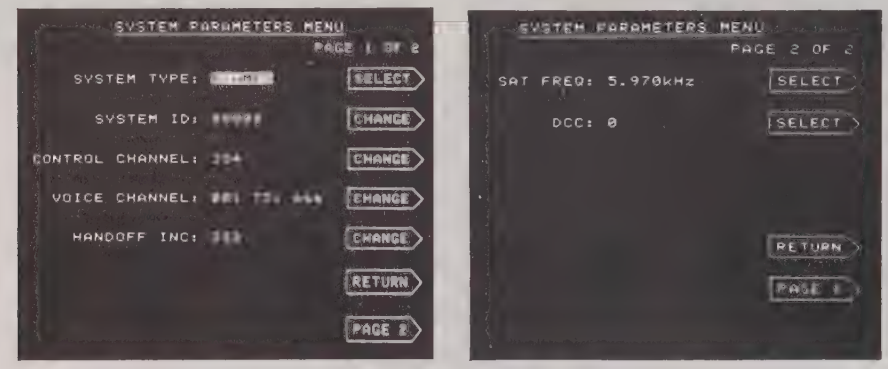

Fig. 3-8a **SYSTEM PARAMETERS MENU** pages 1 and 2 - except N-AMPS

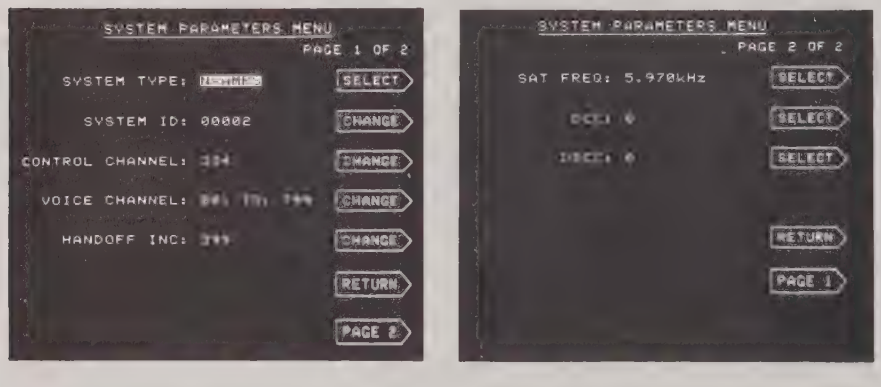

Fig. 3-8b **SYSTEM PARAMETERS MENU** pages 1 and 2 - N-AMPS

In addition, this menu allows changes to be made under the **SYSTEM PARAMETER WORD 2 MENU** which is not shown in the options. This is selected by pressing the TX TEST key and then, within 1 second, pressing the 2 key.

SYSTEM TYPE **selection**

This is not applicable to software version 1.

Different system types can be selected. See Table 3-8. Repeatedly pressing the SYSTEM TYPE soft key shows the different systems in turn in reverse video. Stop pressing when the required system appears. The title of the selected system type is shown in reverse video on the top level menus. When a new system type is selected, default settings for calling channels and voice channels are used and appear on the screen after 2 seconds.

When the user wishes to define his own system, this is done by stepping through the built-in systems, as described above, until the word DEFINITION is shown flashing. This appears after the current title of the user-defined system, the default title of which is AMPS. If DEFINITION is left flashing for more than 2 seconds, the **SYSTEM DEFINITION MENU** appears. See page 3-1-14.

SYSTEM ID **setting**

Enter a 5-digit decimal number. The default setting is 00002.

CONTROL CHANNEL **setting**

Enter a number in the range 0 to 1023. The default setting is 334.

VOICE CHANNEL **setting**

For the first voice channel and the last voice channel, enter two numbers in the range 0 to 1023. The default settings are 1 and 666.

The first number is for the initial voice channel that the mobile is to be assigned to when it goes into conversation. The second number is for the final voice channel that the mobile is to be assigned to in the test sequences and the automatic handoff test routine (no. 24).

HANDOFF INCREMENT **setting**

Enter a number in the range 1 to 1023. The default setting is 333.

This number is for incrementing between the first voice channel and the last during the automatic handoff test routine (no. 24). Usually 3 or 4 channels are tested.

SAT FREQUENCY **selection**

Select a SAT frequency (5.970, 6.000 or 6.030 kHz) to be generated by the mobile when it goes into conversation. Repeatedly pressing the SAT FREQUENCY soft key shows the different frequencies in turn in reverse video. Stop pressing when the required frequency appears. The default selection is 5.970 kHz.

DCC **selection**

For the digital colour code, select 0, 1, 2 or 3. The default selection is 0.

DSCC selection

For the digital SAT colour code, select from the following:-

DSCC	Data (hexadecimal)
0	2556CB
1	255B2B
2	256A9B
3	25AD4D
4	26AB2B
5	26B2AD
6	2969AB

The default selection is 0.

SYSTEM DEFINITION MENU

This is not applicable to system software version 1.

The system definitions for the built-in system types are shown in Table 3-8. The **SYSTEM DEFINITION MENU** consists of two pages of options which allow the user to define his own system. See Fig. 3-9. This is accessed by allowing the word DEFINITION to flash in the SYSTEM TYPE field of the **SYSTEM PARAMETERS MENU** for longer than 2 seconds.

Page 1 allows changes to be made under the following options:-

(a) SYSTEM TITLE.
(b) LOWEST CHANNEL.
(c) HIGHEST CHANNEL.

Pressing PAGE 2 selects the other page of the menu; RETURN restores the **SYSTEM PARAMETERS MENU**.

Page 2 allows changes to be made under the following options:-

(a) TX BASE FREQUENCY.
(b) DUPLEX OFFSET (positive or negative).
(c) CHANNEL SPACING (positive or negative).
(d) MEAN DATA DEVIATION.
(e) SAT DEVIATION.

Pressing PAGE 1 selects the other page of the menu; RETURN restores the **SYSTEM PARAMETERS MENU**.

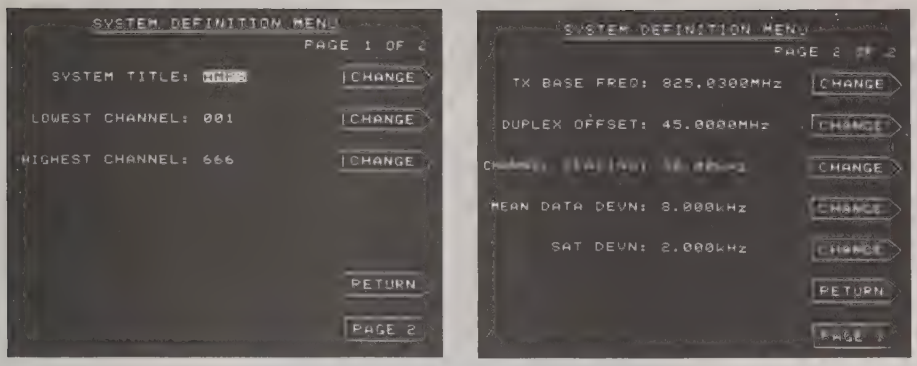

Fig. 3-9 **SYSTEM DEFINITION MENU** pages 1 and 2

SYSTEM TITLE **setting**

This is entered by pressing its soft key. A table of letters appears at the bottom of the display. Select each letter of the title by entering first the line number (1 to 3) followed by the column number (0 to 9). Each selected character appears in the SYSTEM TITLE field in reverse video. Errors can be rectified by using the DELETE key. The title can be aborted at any time by pressing any other soft key. If the title is not required, it can be removed by deleting characters to leave a blank field.

LOWEST CHANNEL **setting**

Enter a number in the range 0 to the highest channel setting.

HIGHEST CHANNEL **setting**

Enter a number in the range from the lowest channel setting to 2047.

TX BASE FREQUENCY **setting**

This is the mobile transmitter base frequency and is the value for channel 1. Enter a value in the range 10 to 1000.0000 MHz using a unit key after the numerical keys. The system rounds to the nearest 100 Hz.

DUPLEX OFFSET **setting**

Enter a value in the range 0 to 75.0000 MHz using a unit key after the numerical keys. The system rounds to the nearest 100 Hz. Negative values may be entered for systems with an inverse base frequency (i.e. where the transmitter frequency is higher than the receiver frequency.

CHANNEL SPACING **setting**

Enter a value in the range 5 to 100.00 kHz using a unit key after the numerical keys. The system rounds to the nearest 50 Hz. Negative values may be entered for systems with reverse channel numbering.

MEAN DATA DEVIATION setting

Enter a value in the range 0 to 8.000 kHz using a unit key after the numerical keys.

SAT DEVIATION setting

Enter a value in the range 0 to 2.500 kHz using a unit key after the numerical keys.

TABLE 3-8 BUILT-IN SYSTEM TYPES

System type	Minimum channel number	Maximum channel number	Mobile Tx frequency channel 1	Duplex offset (Rx - Tx)	Channel spacing	Deviation	
						Mean data	SAT
			MHz	MHz	kHz	kHz	kHz
E-AMPS	1	1023	825.030	45	30	8.0	2.0
N-AMPS	1	666	825.030	45	30	8.0	2.0
AMPS	1	666	825.030	45	30	8.0	2.0

MOBILE PARAMETERS MENU

This menu, as shown in Fig. 3-10, allows a change to be made under the MOBILE NUMBER option.

Pressing RETURN restores the **CHANGE FORMAT MENU**.

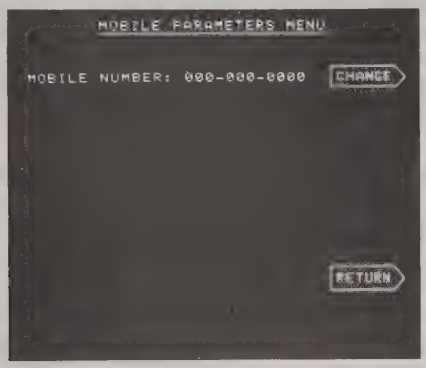

Fig. 3-10 MOBILE PARAMETERS MENU

MOBILE NUMBER **setting**

The mobile is identified by a number which has the format xxx-xxx-xxxx. Enter a suitable number. The default setting is 000-000-0000.

DISPLAY FORMAT MENU

This menu, as shown in Fig. 3-11, allows selections to be made under the following options:-

(a) DISPLAY FORMAT.
(b) PAUSE.
(c) NUMBER FORMAT.

Pressing RETURN restores the **CHANGE FORMAT MENU**.

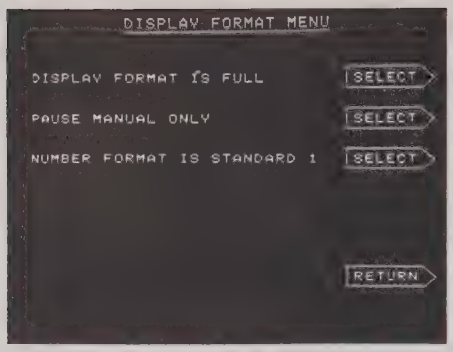

Fig. 3-11 **DISPLAY FORMAT MENU**

DISPLAY FORMAT **selection**

This option selects the display format to be used in the FULL AUTO TEST mode. The choice is between FULL and SUMMARY. FULL format uses a split duplex screen to display the RF and AF parameters of the mobile in the top half with the summary line comprising title, status and result fields together with other information relating to the test routine (e.g. test limits) in the bottom half. SUMMARY format shows a scrolling window of up to 10 summary lines with up to the first 9 failures being retained.

Since it is only intended to provide brief information, the GO/NO-GO TEST mode automatically uses the SUMMARY format.

PAUSE **selection**

This option selects the method of interrupting a test sequence in the FULL AUTO TEST mode from one of the following:-

(a) PAUSE ALWAYS. This causes the test sequence to be halted after each test routine has been completed.

(b) PAUSE MANUAL ONLY. This halts the test sequence only when the PAUSE key is pressed.

(c) PAUSE ON FAILURE. This causes a halt only when a failure has occurred or when the PAUSE key is pressed.

Since it is intended for rapid testing, the GO/NO-GO TEST mode automatically uses PAUSE MANUAL ONLY.

NUMBER FORMAT **selection**

This option selects between HEXADECIMAL, DECIMAL, OCTAL, STANDARD 1 and STANDARD 2 for the mobile's equipment serial number (ESN) which is displayed in the call processing tests. The default setting is STANDARD 1.

When HEXADECIMAL is selected, the number may subsequently be entered in hexadecimal with the letters A to F being entered by using the SCOPE keys. These are reassigned as a letter keypad and depicted on the screen.

When STANDARD 1 or STANDARD 2 is selected, the ESN is in 32 bits which are divided into 4 or 3 fields respectively in accordance with BABT recommendations.

TEST SEQUENCE MENU

This menu, as shown in Fig. 3-12, allows selection of the test sequence which is used in the GO/NO-GO TEST and the FULL AUTO TEST modes. Selection is made from the following sequences:-

(a) BRIEF TESTING. See page 3-1-40.
(b) COMPREHENSIVE TESTING. See page 3-1-40.
(c) CALL PROCESSING ONLY. See page 3-1-39.
(d) CALL AND RF TESTING. See page 3-1-39.
(e) Title of a user-defined sequence which is held in the 2960's non-volatile user memory. NO SEQUENCE DEFINED is displayed as the default title until it is redefined. A user-defined sequence is not available if a user-defined subroutine has been entered under remote control (using the USER command).

BRIEF TESTING is executed by default.

Also, the menu allows selections to be made under the following options:-

(a) DTMF.
(b) HOOK FLASH.

Pressing RETURN restores the **CHANGE FORMAT MENU**.

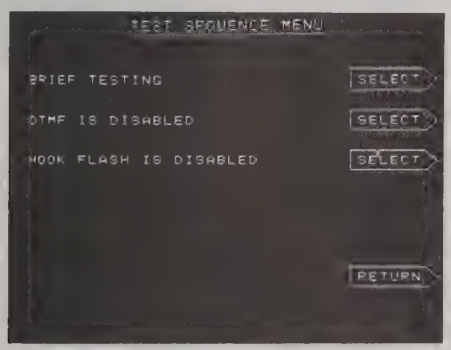

Fig. 3-12 TEST SEQUENCE MENU

DTMF selection

For the DTMF tones test routine (no. 30) in test sequences, selection is made between DISABLED and ENABLED. The default setting is DISABLED.

HOOK FLASH selection

For the hook flash test routine (no. 31) in test sequences, selection is made between DISABLED and ENABLED. The default setting is DISABLED.

PRINTER MENU

This menu, as shown in Fig. 3-13, allows selections to be made under the following options:-

(a) PRINTER PORT.
(b) PRINT.
(c) TERMINATE.

Pressing RETURN restores the **CHANGE FORMAT MENU.**

PRINTER PORT **selection**

This option selects which of the three printer ports, GPIB TALK-ONLY, SERIAL RS-232 or PARALLEL, is to be connected to the printer for producing a printed copy of the results in the GO/NO-GO TEST or the FULL AUTO TEST mode. When a printer is not to be used or is not connected, select UNASSIGNED. Otherwise, a PRINTER TIMEOUT error message may be displayed during the test sequence. The default selection is UNASSIGNED.

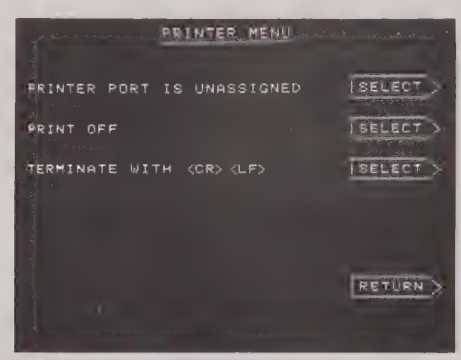

Fig. 3-13 **PRINTER MENU**

PRINT **selection**

This option selects the criteria for printing a test routine and its result as ALL, ON FAILURE or ON PASS. When a printout is not required, select OFF. The default selection is OFF.

TERMINATE **selection**

This option selects the characters which the printer requires to terminate a line. Selections are <CR> and <LF>, <LF> only and <CR> only. The default selection is <CR> and <LF>.

Note...

A printer may be used in 2955 TALK ONLY mode as follows:-

(1) Connect the printer to the appropriate port and select the parameters from the menus as above.

(2) Switch off both the 2955 and the Adapter.

(3) Set the 2955's GPIB unit to TALK ONLY (switch 6 to 1) and select the printing mode using switches 1 and 2 as follows:-

Switches 1 and 2	Case	<CR>
00	Upper and lower	Suppressed
01	Upper and Lower	Not suppressed
10	Upper only	Suppressed
11	Upper only	Not suppressed

(4) Switch on both the 2955 and the Adapter then press the HOLD DISPLAY key.

(5) Press PRT to start the printout. Data is now passed from the 2955 through the Adapter to the printer.

(6) When printing is complete, restore the 2955 GPIB unit switch settings to normal.

INTERFACE MENU

This menu, as shown in Fig. 3-14, allows selections to be made under the following options:-

(a) BAUD RATE.
(b) LENGTH/PARITY.
(c) STOP BITS.
(d) GPIB ADDRESS.

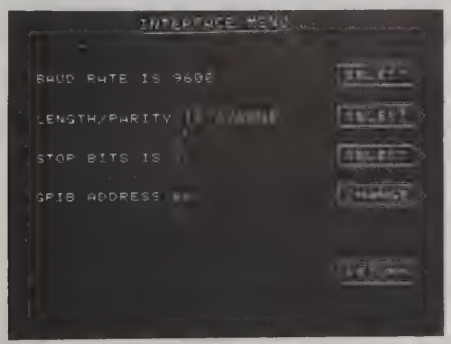

Fig. 3-14 INTERFACE MENU

Pressing RETURN restores the **CHANGE FORMAT MENU.**

BAUD RATE **selection**

In order to accommodate different types of printers on the RS-232 port, the serial baud rate is selected from 75, 150, 300, 600, 1200, 2400, 4800 and 9600. The default selection is 1200.

LENGTH/PARITY **selection**

Length and parity for the RS-232 port are selected from 7/EVEN, 7/ODD, 7/NONE, 8/EVEN, 8/ODD and 8/NONE. The default selection is 8/NONE.

STOP BITS **selection**

A stop bit or bits is assigned to the end of every byte which is transmitted to the printer. This is selected from 1 and 2. The default selection is 1.

GPIB ADDRESS **setting**

Enter the 2-digit GPIB address using the keypad. Addresses in the range 01 to 30 can be entered. Ensure that TALK ONLY is not selected (i.e. that switch 6 is not set to 0) unless the 2960 is only to be used in the 2955 mode (i.e. for use as a printer port converter). The default setting is 06.

MISCELLANEOUS MENU

This menu, as shown in Fig. 3-15, allows selections to be made under the following options:-

(a) DE-MOD SOURCE.
(b) DISC STEP RATE.
(c) PRINTER PORT COMMAND.
(d) SYSTEM CONFIGURATION.

Pressing RETURN restores the **CHANGE FORMAT MENU.**

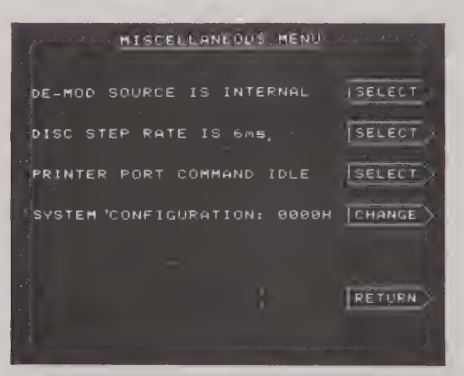

Fig. 3-15 MISCELLANEOUS MENU

DE-MOD SOURCE selection

This selects the method of demodulating the mobile's transmitted signal as INTERNAL (i.e. through 2960's internal demodulator) or EXTERNAL (i.e. through an external modulation meter). INTERNAL is automatically selected when the 2960 is switched on. The EXTERNAL facility enables the RF section of the mobile to be bypassed so as to test only the modem section.

DISC STEP RATE selection

This selects the disc drive head stepping rate to permit a range of drives to be used. Press SELECT once or twice until 6 ms or 12 ms appears as appropriate for the drive in use. The selected rate is saved automatically with each file.

PRINTER PORT COMMAND selection

This is used when the printer is required to print a specified message. Selection is made from the following:-

(a) IDLE. There is no printer output. This is the default selection.

(b) SEND (flashing). This sends a string (which has been entered under the **EDIT COMMAND MENU**) to the printer. Prior to this, appropriate selections have to be made under the **PRINTER MENU** and the printer has to be enabled. After sending, IDLE is restored.

(c) EDIT (flashing). The **EDIT COMMAND MENU** appears. See below.

SYSTEM CONFIGURATION setting

This facility is included so that lesser-used functions and features can be enabled without having full menus. They are enabled by setting bits in two bytes in memory. This is done by entering the equivalent 4-digit hexadecimal number. The bits which are used at present for AMPS are detailed below, the other bits being undefined and reserved for future use. Once an entry has been made for a particular application, it can be saved, along with the other settings, in the non-volatile store.

In internal test sequences, the receiver sensitivity test routine can be replaced by the receiver SINAD test routine. This allows faster operation when only a pass or fail result is required.

In internal test sequences, the data deviation test routine can be included.

The 2960 programming capability has been enhanced over that of the the 2957. In applications where 2957 compatibility is required, this can be invoked.

In the PAGE MOBILE mode, transmission to the mobile can be made to be only a single word (the abbreviated address message).

Normally, when a call placement is being made, a delay of approximately 2 seconds is applied before a voice channel is assigned. This delay can be avoided.

As an N-AMPS mobile has to be able to handoff from a wideband channel to a narrowband channel and vice versa, the channel types have to be selected for FULL AUTO TEST sequences. The initial voice channel type can be set and the handoff voice channel can be set to the same channel type or to rotate between WIDE, NARROW, BELOW and ABOVE channel types.

When there is no response to a REGISTRATION request on the default control channel, normally a further attempt is made in the alternative system's block of control channels. This retry can be disabled.

A 4-digit hexadecimal number is shown against SYSTEM CONFIGURATION. Normally, this is 0000H. To invoke any of the above conditions, enter a 4-digit hexadecimal number which is calculated by adding together the following hexadecimal numbers:-

Setting	Entry	
	Hexadecimal	(Binary)
	a + b + c + d + e + f + g + h	
	where	
Receiver sensitivity or SINAD:		
Sensitivity test included	a = 0000	(xxxxxxxx xxxxxxx0)
SINAD test included	or 0001	(xxxxxxxx xxxxxxx1)
Data deviation test:		
Not included	b = 0000	(xxxxxxxx xxxxxx0x)
Included	or 0002	(xxxxxxxx xxxxxx1x)
2960 or 2957 operation:		
Normal 2960	c = 0000	(xxxxxxxx xxxxx0xx)
2957 compatible	or 0004	(xxxxxxxx xxxxx1xx)
Page mobile:		
Normal	d = 0000	(xxxxxxxx xxxx0xxx)
Single word	or 0008	(xxxxxxxx xxxx1xxx)
Call placement delay:		
Delay included	e = 0000	(xxxxxxxx xxx0xxxx)
Delay not included	or 0010	(xxxxxxxx xxx1xxxx)
N-AMPS initial voice channel:		
WIDE channel	f = 0000	(xxxxxxxx x00xxxxx)
NARROW channel	or 0020	(xxxxxxxx x01xxxxx)
BELOW channel	or 0040	(xxxxxxxx x10xxxxx)
ABOVE channel	or 0060	(xxxxxxxx x11xxxxx)
N-AMPS handoff voice channel:		
Same channel type	g = 0000	(xxxxxxxx 0xxxxxxx)
Rotate channel type	or 0080	(xxxxxxxx 1xxxxxxx)
Registration retry:		
Retry	h = 0000	(xxxxxxx0 xxxxxxxx)
Disable retry	or 0100	(xxxxxxx1 xxxxxxxx)

EDIT COMMAND MENU

This menu, as shown in Fig. 3-16, allows entry of a message of up to 30 characters to be sent to the printer when required. The default message is a <LF>.

To enter or change the message, press the upper CHANGE key. A table of characters appears at the bottom of the display. Select each character of the message by entering first the line number (1 to 3) followed by the column number (0 to 9). Each selected character appears in the PRINTER PORT COMMAND field. Errors can be rectified by using the DELETE key. The message can be aborted at any time by pressing any other soft key. If the message is not required, it can be removed by deleting characters to leave a blank field.

Fig. 3-16 **EDIT COMMAND MENU**

Alternatively or subsequently, press the lower CHANGE key. Hexadecimal digits A to F appear at the bottom of the display to show that the 2955's OSCILLOSCOPE keys are used for these. Select each character of the message by entering its 2-digit hexadecimal code for the 2955's character set as given in its Operating Manual. For numbers and upper-case letters, these are the same as ASCII codes. Terminate the message with 0A (i.e. for <LF>). Each selected character appears in the PRINTER PORT COMMAND field. Codes below hexadecimal 20 (decimal 32) or above hexadecimal 7F (decimal 127) can be entered. Each of these is entered directly or subsequently after leaving a space for it and is shown in the PRINTER PORT COMMAND field as a ?.

To move the cursor along (or back to the first position after the last), press ENTER.

Pressing RETURN restores the **MISCELLANEOUS MENU**.

SYSTEM PARAMETER WORD 2 MENU

This is a 'hidden' menu - it is not shown on any of the other menus. To enter, select the **SYSTEM PARAMETERS MENU** and then press the TX TEST key. Then, within 1 second, press the 2 key.

This menu, as shown in Fig. 3-17a and Fig. 3-17b, allows the user to change certain bit fields in the overhead message which is sent by the 2960 on a control channel. Each bit field which can be changed is shown in the menu with a code letter above it as follows:-

Parameter	Code
Serial number	S
Extended address	E
Home registration	H
Roamer registration	R
Discontinuous transmission	D (Except N-AMPS) or DT (N-AMPS)
Forced registration	F
Number of paging channels - 1	N - 1
Read control filler	R
Combined paging and access	C
Number of access channels - 1	CMAX - 1

Roamer registartion does not apply to N-AMPS. In these cases, the bit is shown as reserved.

The default settings are necessary for correct operation of the internal test sequences. However, the user may wish to verify correct operation of a mobile with these bits changed. This would normally be done in a user-defined test sequence or by using the manual test mode.

For a full description of these bits and their significance to the mobile under test, refer to the relevant air-interface specification.

To select the bit field, press the SELECT key. The selected bit field is shown in reverse video. To change the bit field, press the TOGGLE key.

For bit fields with more than one bit, the TOGGLE key changes to SELECT. To change a bit, press the SELECT key, enter a decimal number on the keypad and press the ENTER key.

To restore all the bit fields to their default values, press the DEFAULT key. Changes to bit fields are retained only until the instrument is switched off.

Pressing RETURN restores the **SYSTEM PARAMETERS MENU**.

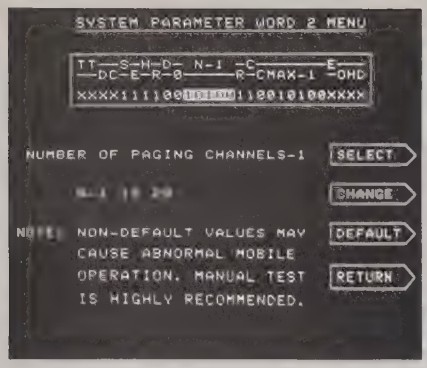

Fig. 3-17a SYSTEM PARAMETER WORD 2 MENU - except N-AMPS

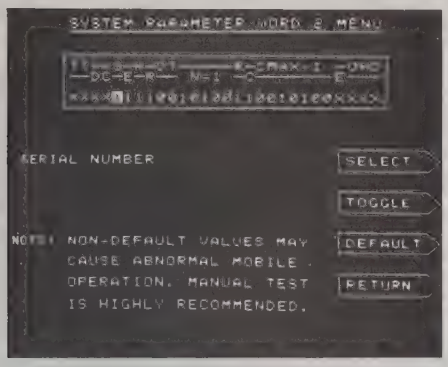

Fig. 3-17b SYSTEM PARAMETER WORD 2 MENU - N-AMPS

PARAMETER STORAGE

Six full sets of parameters can be stored.

From the main top level menu, select FULL AUTO TEST. The FULL AUTO TEST intermediate display appears as shown in Fig. 3-6.

To store the current settings, press the 2955's STORE key followed by one digit from 1 to 6.

To recall settings, press the 2955's RECALL key followed by the same digit which was used to store the setting. The intermediate display is updated accordingly.

When more than one system is being used, settings for one system cannot be recalled into another system. The user has to take note of which store he has used for each set of parameters. This allows the rapid restoration of settings when changing between system options.

GO/NO-GO TEST MODE

This is designed for rapid operation. It executes the test sequence which has been selected from the **CHANGE FORMAT MENU**. It may be one of the four built-in test sequences or an externally-written test sequence which has been loaded into the 2960's memory.

The GO/NO-GO TEST mode is accessed from the main top level menu, as shown in Fig. 3-4, by pressing the GO/NO-GO TEST key. The SUMMARY DISPLAY FORMAT display then appears as shown in Fig. 3-18 and the test sequence is immediately started. The DISPLAY FORMAT is automatically set to SUMMARY irrespective of the current setting in the **DISPLAY FORMAT MENU**.

Results of each test routine are shown but the main purpose of using the GO/NO-GO TEST mode is to make a quick appraisal of the mobile so a PASSED, ERROR: or *FAIL* status is displayed for every test routine. This saves the user's time in interpreting data or checking measurements.

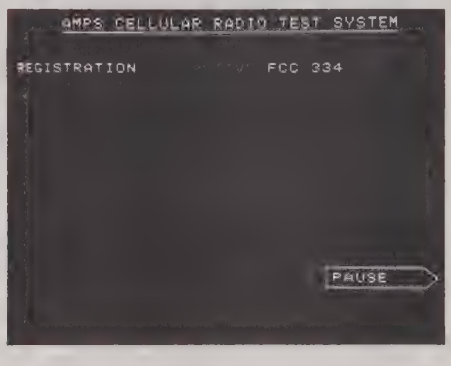

Fig. 3-18 SUMMARY DISPLAY FORMAT display

When printing has been selected from the **PRINTER MENU**, the user can obtain a printout of the test routines and their results using one of the user ports. The format of the printout can be ALL, ON FAILURE or ON PASS depending on the user's selection.

As there may be more than ten test routines in a sequence, scrolling is employed when the screen is full. Failed test routines are collected at the top of the display until the sequence is finished.

In the GO/NO-GO TEST mode, PAUSE is automatically set to MANUAL ONLY irrespective of the current setting in the **DISPLAY FORMAT MENU**. Pressing the PAUSE key causes the sequence to be stopped at the end of the current test routine and the CONTINUE key appears as shown in Fig. 3-21.

At the end of the test sequence, a summary of the test routines and their results is automatically displayed as shown in Fig. 3-20 so that the user can see if the mobile has failed any of the test routines. For test sequences which contain more than ten test routines, failed ones have priority. Pressing the CONTINUE key causes the mobile's MSN and name of country to appear at the bottom of the screen.

Pressing the RETURN key restores the main top level menu.

FULL AUTO TEST MODE

This executes the test sequence which has been selected from the **CHANGE FORMAT MENU**. It may be one of the four built-in test sequences or an externally-written test sequence which has been loaded into the 2960's memory. A split screen display is shown so that the service engineer can monitor the RF and AF parameters.

The FULL AUTO TEST mode is accessed from the main top level menu, as shown in Fig. 3-4, by pressing the FULL AUTO TEST key. The FULL AUTO TEST intermediate display then appears as shown in Fig. 3-6. This shows a summary status of the desired test parameters and display formats held in the non-volatile memory since the **CHANGE FORMAT MENU** was last accessed.

To change any of these, press the CHANGE FORMAT key. See page 3-1-10. To save all the format parameters, six non-volatile stores are available. To store the parameters, press the STORE key followed by a number from 1 to 6. To recall these parameters, press the RECALL key followed by the same number.

To start the test sequence, press the START TEST key.

When FULL DISPLAY FORMAT has been chosen, the display consists of three sections as shown in Fig. 3-19. Most of the top half is the 2955 DUPLEX display. The bottom half displays the limits for the transceiver test routines plus the mobile's MSN and name of country. Separating the two is the current test routine shown being executed.

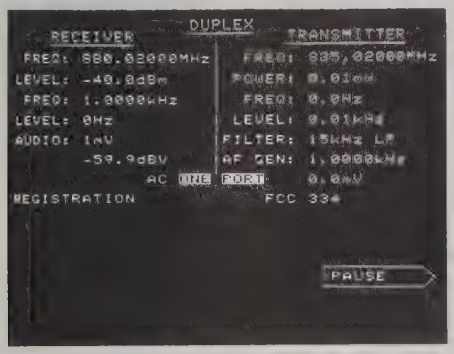

Fig. 3-19 FULL AUTO TEST FULL DISPLAY FORMAT display

When SUMMARY DISPLAY FORMAT has been selected, the display is the same as that for the GO/NO-GO TEST mode as shown in Fig. 3-18. In this case, one line is shown for each test routine so that, as the screen is filled, the lines are scrolled upwards. Failed test routines are collected at the top of the screen.

PAUSE has been previously set to ALWAYS, MANUAL ONLY or ON FAILURE. Pressing the PAUSE key causes the sequence to be interrupted manually at the end of the current test routine. The CONTINUE key appears as shown in Fig. 3-21.

At the end of the test sequence, a summary of the test routines and their results is automatically displayed as shown in Fig. 3-20 so that the user can see which test routines the mobile has failed. For test sequences which contain more than ten test routines, failed ones have priority. Pressing the CONTINUE key causes the mobile's identity to appear at the bottom of the screen.

For the N-AMPS system, channel numbers are shown with the prefix WC for WIDE type channels, NC for NARROW type channels, BC for BELOW type channels and AC for ABOVE type channels..

Pressing the RETURN key restores the FULL AUTO TEST intermediate display.

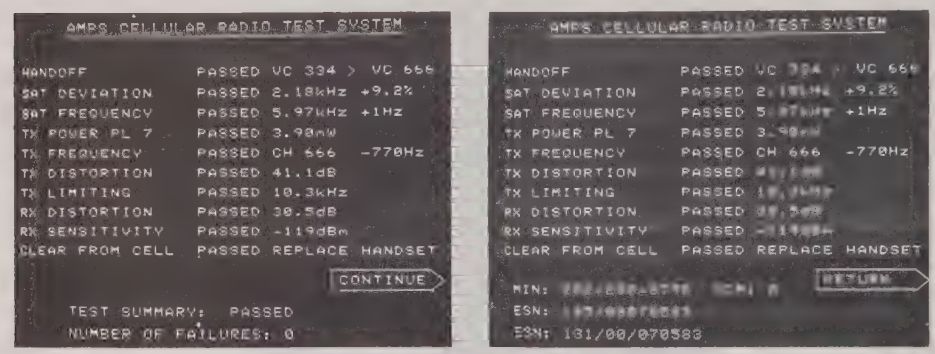
AMPS CELLULAR RADIO TEST SYSTEM
HANDOFF PASSED VC 334 > VC 666
SAT DEVIATION PASSED 2.18kHz +9.2%
SAT FREQUENCY PASSED 5.97kHz +1Hz
TX POWER PL 7 PASSED 3.90mW
TX FREQUENCY PASSED CH 666 -770Hz
TX DISTORTION PASSED 41.1dB
TX LIMITING PASSED 10.3kHz
RX DISTORTION PASSED 30.5dB
RX SENSITIVITY PASSED -119dBm
CLEAR FROM CELL PASSED REPLACE HANDSET
CONTINUE
TEST SUMMARY: PASSED
NUMBER OF FAILURES: 0
AMPS CELLULAR RADIO TEST SYSTEM
HANDOFF PASSED VC 334 > VC 666
SAT DEVIATION PASSED +9.2%
SAT FREQUENCY PASSED +1Hz
TX POWER PL 7 PASSED
TX FREQUENCY PASSED CH 666 -770Hz
TX DISTORTION PASSED
TX LIMITING PASSED
RX DISTORTION PASSED
RX SENSITIVITY PASSED
CLEAR FROM CELL PASSED REPLACE HANDSET
RETURN
ESN: 161/00/070583

Fig. 3-20 Test summary displays

TEST SEQUENCE PAUSE

In the GO/NO-GO TEST mode, the test sequence can be interrupted by pressing the PAUSE key. In the FULL AUTO TEST mode, the PAUSE function can be activated manually, automatically after every test routine or when one has failed. This depends on which was selected from the **DISPLAY FORMAT MENU**. In all cases, the test sequence is interrupted only at the end of a test routine. When a PAUSE occurs, the CONTINUE key appears as shown in Fig. 3-21. The user can then select one of the following options:-

(a) CONTINUE.
(b) ABORT TESTING.
(c) MANUAL RF TESTING.
(d) DATA.

CONTINUE option

Pressing the CONTINUE key restarts the test sequence from the point at which it was halted.

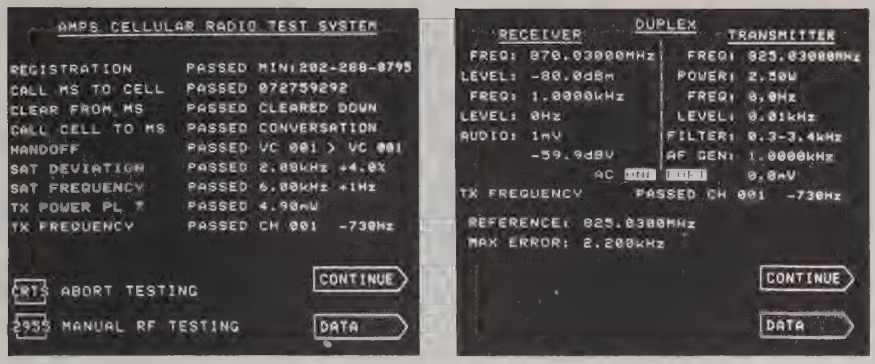

Fig. 3-21 SUMMARY DISPLAY FORMAT and FULL AUTO TEST FULL DISPLAY FORMAT paused displays

ABORT TESTING **option**

To abort the test sequence and access the main top level menu, press the CRTS key. This allows the user to enter the MANUAL TEST facility to carry out specific testing for more detailed fault-finding or to start another test sequence.

MANUAL RF TESTING **option**

When the display shows the 2955 key, the user can press the 2955 key to call up the DUPLEX display which has been automatically set to the parameters of the last test sequence. The user now has manual control of the RF and AF signal generators for alignment and fault finding purposes on the mobile's transceiver circuits. Do not leave DUPLEX operation (i.e. do not press the TX TEST key or the RX TEST key) or the mobile will drop out of service. Press the CRTS key to return to the test sequence.

DATA **option**

The data displays allow the user to view the data messages which are sent by the mobile to the cell and from the cell to the mobile during the call processing test routines and in a MANUAL TEST procedure. These displays allow the user to rapidly identify incorrect bits sent by the mobile which may have caused it to fail. They can also serve as an educational or reference facility for users who are unfamiliar with cellular signalling.

Press the DATA key to access the **REVERSE WIDEBAND DATA** display as shown in Fig. 3-22 (except N-AMPS) or the **REVERSE NARROW/WIDEBAND DATA** display (N-AMPS). In the lower half, this shows the 12 hexadecimal digits of the data frames which have been sent by the mobile on the reverse channels during the last signalling test routine. Except for N-AMPS narrowband, each word is normally sent five times so the the 2960 can make a majority decision on the contents. If the repeats match the original word, it is shown together with the number of times that it has been sent. For N-AMPS narrowband, each word is sent only once. RCC or RVC is shown for a control channel or a voice channel respectively.

Press the RETURN key to restore the previous display.

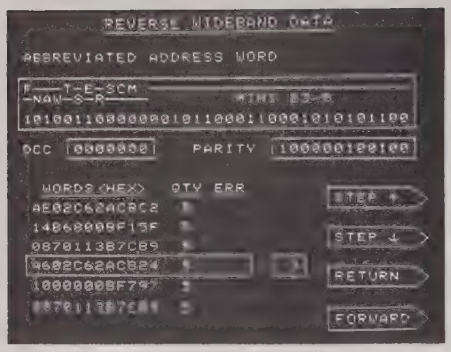

Fig. 3-22 REVERSE WIDEBAND DATA display

Press the FORWARD key to access the FORWARD WIDEBAND DATA menu as shown in Fig. 3-23 (except N-AMPS) or the FORWARD NARROW/WIDEBAND DATA menu (N-AMPS). The type of forward message can be then selected for analysis. Selection is from the following options:-

(a) CONTROL FILLER words. These are null data which are sent when no active information is being transmitted. This enables mobiles to scan continuously for a strong signal onto which they can lock.

(b) OVERHEAD MESSAGE words. These contain certain information which relates to the system parameters of the local network (e.g. SID, available control channels).

(c) MOBILE STATION CONTROL FCC words. These contain commands and messages which are sent to a particular mobile on the forward control channel during registration and call set-up. Each word is repeated a number of times to ensure that the mobile receives the correct data.

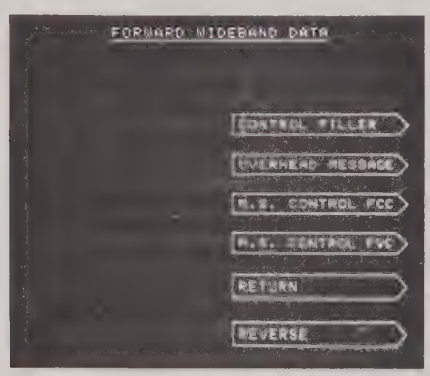

Fig. 3-23 FORWARD WIDEBAND DATA menu

(d) MOBILE STATION CONTROL FVC words. These contain commands and messages which are sent to a particular mobile on the forward voice channel during a call (i.e. handoff). Except for N-AMPS narrowband, each word is repeated a number of times to ensure that the mobile receives the correct data. For N-AMPS narrowband, each word is not repeated.

Press one of the option keys to access the appropriate **FORWARD WIDEBAND DATA** or **FORWARD NARROW/WIDEBAND DATA** display. An example is shown in Fig. 3-24. In the lower half, there are the 10 hexadecimal digits of the data frames which have been sent by the 2960 to the mobile during the last signalling test routine. The frame type is shown together with the number of times that the particular frame has been repeated.

Press the REVERSE key to restore the appropriate **REVERSE DATA** display. Press the RETURN key to restore the previous display.

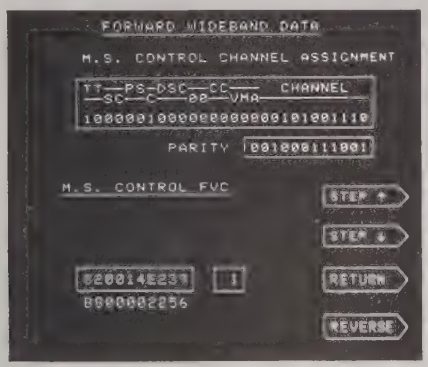

Fig. 3-24 **OVERHEAD MESSAGE** display

A frame can be selected for analysis by pressing the STEP ↑ key or the STEP ↓ key until the frame is displayed in the lower box. The frame is then shown as 48 or 40 bits in the box in the upper half together with the frame type in accordance with the AMPS specification.

A frame which contains a single incorrect bit is indicated by a C in the ERR column. If more than one bit is incorrect, the frame is indicated by a flashing E. When there is a single bit error in the data part of the frame which is shown in the upper box, the incorrect bit is shown in reverse video. When there is an error in the parity part of the frame, the incorrect bit is not shown.

To print the data, enable the printer and then press the RX TEST key. The selected frame is then printed in the form of 48 or 40 bits together with the frame type. Repeated pressing of the TX TEST key prints each successive frame.

MANUAL TEST MODE

This provides the user with manual control of the 2960. It is intended to be used for troubleshooting and repair rather than for routine testing.

The MANUAL TEST mode is accessed from the main top level menu, as shown in Fig. 3-4, by pressing the MANUAL TEST key. The **MANUAL OPERATION** display then appears as shown in Fig. 3-25a and Fig. 3-25b. It consists of a generated section shown on the upper half and a measured section with readings shown on the lower half. Besides scanning the keys and checking the data, the system continuously searches for SAT or DSAT and ST or DST. When these are detected, SAT, DSAT, ST or DST is shown in reverse video on the display. The received DTMF tones, the supply voltage, current and DC power are also shown. If the voltage remains below 1 V for longer than 6 seconds, the supply voltage, current and power readings are disabled. This enables the SAT readings to be updated three times faster than normal thus making adjustment easier.

The user can access the following options:-

(a) CHANNEL.
(b) SAT FREQ and LEVEL and DATA LEVEL (E-AMPS and N-AMPS wideband) or DSAT DATA and LEVEL and DATA LEVEL (N-AMPS narrowband).
(c) MODE.
(d) AF PATH.
(e) DATA.

Pressing the CRTS key restores the main top level menu. Pressing the 2955 key calls up the 2955 **DUPLEX** display. If the CRTS key is pressed once again, the user is taken back to the **MANUAL OPERATION** display.

CHANNEL setting

This is selected by pressing the CHANNEL key (which changes to ENTER). The value is then entered on the keypad and terminated with the ENTER key.

This option is normally only used when the user is prompted in the HANDOFF mode. However, it is possible to reverse the 2960's frequency plans by entering a negative number. This means that the MANUAL TEST procedure could be used for testing certain functions of a base station.

For the N-AMPS system, the channel type WIDE, NARROW, BELOW or ABOVE is shown alongside the CHANNEL number. After entering the CHANNEL number, the ENTER key changes to SELECT. To select the channel type, press the SELECT key. When a narrowband channel has been selected, SAT, SCC and ST are replaced by DSAT, DSCC and DST on the display.

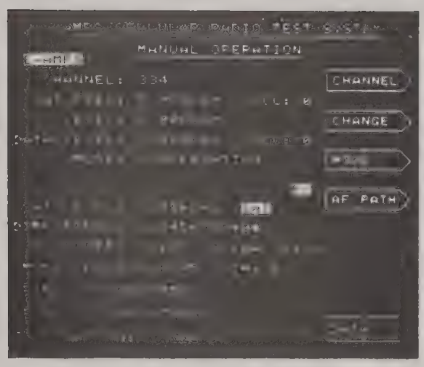

Fig. 3-25a MANUAL OPERATION display - E-AMPS

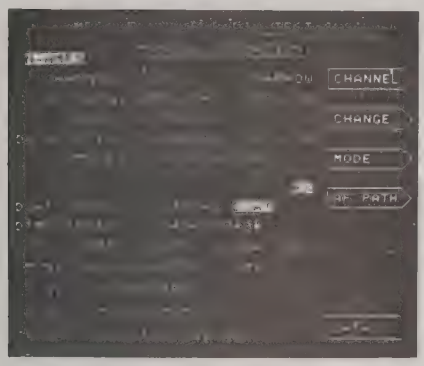

Fig. 3-25b MANUAL OPERATION display - N-AMPS narrowband

SAT FREQ, SAT LEVEL and DATA LEVEL or DSAT DATA, DSAT LEVEL and DATA LEVEL settings

SAT FREQ, SAT LEVEL and DATA LEVEL are applicable to E-AMPS and N-AMPS wideband. DSAT DATA, DSAT LEVEL and DATA LEVEL are applicable to N-AMPS narrowband.

These are selected by pressing the CHANGE key (which changes to NEXT) and scrolling through to the required setting. Each of the three values is entered on the keypad and terminated with the NEXT key. The default levels are the AMPS specified nominal levels. The default SAT FREQ and DSAT DATA are taken from the settings in the SYSTEM PARAMETERS MENU.

The SCC (SAT colour code) value depends on the SAT frequency setting.

The DSAT DATA is set by entering the DSCC value.

MODE selection

This allows the user to select a signalling test mode depending on the state of the mobile under test. Some of the modes are the same as those in the built-in test sequences; others generate a pattern of data which is primarily intended to exercise a mobile's other functions. The user can access the DATA display by pressing the DATA key to check the mobile's responses. When the user selects a mode, screen prompts are given for the user to enter test parameters.

To select the mode, press the MODE key (which changes to SELECT). Scroll through the modes available until the required mode appears. The selected mode is implemented after a 2 second timeout. For modes (a) to (g), SAT or DSAT and ST or DST are not detected or measured. These modes operate as follows:-

(a) FCC. This sends continuous Forward Control Channel (FCC) messages. If the system ID is different from the current setting, the mobile responds by registering. In this mode, a PLACE CALL can be initiated from the mobile. When this is done, PLACE CALL is shown on the display (non-flashing) and then the mode changes to CONVERSATION.

(b) REGISTRATION. This is similar to the corresponding test routine in the built-in test sequences. The mobile's MIN, ESN and SCM (hexadecimal for N-AMPS only) are displayed when the mobile registers successfully. The mode then reverts to FCC.

(c) PAGE MOBILE. This is the built-in CALL CELL TO MS test routine. A flashing prompt, together with the mobile's alert signal, requests the user to ANSWER CALL. Upon the user lifting the handset or pressing the SEND key, the mode changes to CONVERSATION.

(d) PLACE CALL. This is the built-in CALL MS TO CELL test routine. A flashing prompt requests the user to PLACE CALL. On the handset, the user keys in up to 32 digits. When they are received by the 2960, they are shown at the bottom of the screen, truncated to 16 digits. The mode changes to CONVERSATION.

(e) DIRECTED RETRY. A Directed Retry command is used by a base station to instruct a mobile which has attempted to access the system to retry on a new control channel. When this mode is selected, there are prompts for a CHANNEL number and then for a CHANPOS number. After the CHANNEL number, enter a CHANPOS number in the range 1 to 127. Except for N-AMPS, the formula is as follows:-

CHANPOS number = NEW CHANNEL - FIRST CONTROL CHANNEL + 1.

For N-AMPS, the formula is as follows:-

CHANPOS number = (NEW CHANNEL - FIRST CONTROL CHANNEL + 2) ÷ 2.

After entry, PLACE CALL is shown flashing. When an access attempt is received from the mobile, a DIRECTED RETRY order is sent. The first entry is to CHANPOS. The mode changes to FCC on the NEW CHANNEL. The mobile should then re-attempt to access on the NEW CHANNEL changing the mode to PLACE CALL which is processed as usual. With some mobiles, it may be necessary to use another signal generator to generate the NEW CONTROL CHANNEL. Connect the modulation input of the signal generator to the MOD OUT connector on the 2960 using a T-piece. Connect the RF output of the signal generator to the RF IN/OUT BNC connector on the 2955. On the signal generator, set the frequency to that of the NEW CHANNEL and the level to approximately -40 dBm (i.e. 40 dB above the level to be seen by the mobile).

(f) NEW ACCESS CHANNEL. When this is selected, there is a prompt for a CHANNEL number. After this number is entered, the overhead message is reinitialized with the appropriate NEW ACCESS CHANNEL action message. With some mobiles, it may be necessary to use another signal generator as in (e).

(g) OVERLOAD CLASS. When this is selected, there is a prompt for a number in the range 0 to 15. When this is entered. an overload class global action message is created and transmitted. If the mobile has an overload class number equal to that in the received message, further access to the system by the mobile is prevented. This does not prevent access to the mobile by the system.

(h) DATA OFF. When a wideband channel is selected, the current SAT frequency is generated. When an N-AMPS narrowband channel is selected, the current DSAT pattern is generated.

(j) SIGNAL TONE. The 2960's data generator sends a continuous signal tone of 10.0 kHz.

(k) DOTTING. The 2960 generates a 5 kHz dotting pattern (a series of alternate 1's and 0's).

When the CALL MS is answered and when the PLACE CALL is successful, there is another level of modes. SAT or DSAT is displayed and the mobile's SAT or DSAT deviation is measured and displayed. These modes which operate as follows:-

(a) CONVERSATION. In this mode, the user can test the handset's numerical, SEND and END keys. DTMF tones received by the 2960 are shown on the display. The mobile's transmitted SAT or DSAT level and the DC power consumption are updated every few seconds.

(b) HANDOFF. When this mode is selected, the user is prompted to select a new channel by the flashing cursor and ENTER sign. The new channel number is entered on the keypad and terminated by pressing the ENTER key. The mobile then changes to the new channel and the mode changes to CONVERSATION. The duration of the mobile's signal tone is shown at the bottom of the screen. For the N-AMPS system, the channel type WIDE, NARROW, BELOW or ABOVE is shown alongside the CHANNEL number. After entering the CHANNEL number, the ENTER key changes to SELECT. To select the channel type, press the SELECT key.

(c) POWER LEVEL. When this mode is selected, SELECT changes to ENTER and the level number (0 to 7) is entered on the keypad. Selection of 8 or 9 is inhibited. The mobile changes its transmitter power level accordingly and the mode reverts to CONVERSATION. When the ENTRY key is pressed instead of a new level number, the last selected power level is used.

(d) CLEARDOWN. This mode is used to terminate the CONVERSATION mode and revert to FCC.

AF PATH selection

This is selected by toggling the AF PATH soft key. The selected audio signal is routed to the Adapter's AF OUT socket (and hence to the 2955's AF INPUT socket) when the 2955 mode is selected and both the CRTS and 2955 indicators are on. The choices are as follows:-

(a) RX. Normal routeing from the Adapter's AF INPUT socket to its AF OUT socket.

(b) RX X20. As (a) but with a 26 dB (x 20) amplifier in the path.

(c) TX. Routing of the DE-MOD SOURCE (as selected under the MISCELLANEOUS MENU) through the currently selected filters to the Adapter's AF OUT socket.

DATA selection

Pressing the DATA key accesses the DATA displays.

BUILT-IN TEST SEQUENCES

A number of test routines are combined into built-in test sequences which can be executed in the GO/NO-GO TEST and the FULL AUTO TEST modes. There are four built-in test sequences to choose from as follows:-

(a) CALL PROCESSING ONLY.
(b) CALL AND RF TESTING.
(c) BRIEF TESTING.
(d) COMPREHENSIVE TESTING.

The required sequence is selected from the **TEST SEQUENCE MENU**. See page 3-1-19.

CALL PROCESSING ONLY sequence

This sequence is the basis of all of the built-in test sequences. It consists of a series of data signalling test routines to check the mobile's ability to initiate and receive calls and to respond to system commands. It is intended for first-line testing of radios which have been reported as faulty to retailers and installers. It can also be used for validation testing to determine whether a unit is suitable for sale or installation. The only connection required is from the mobile's antenna socket to the RF IN/OUT N socket on the 2960. The sequence of test routines is as follows:-

(a) REGISTRATION.
(b) CALL MS TO CELL.
(c) DTMF TONES. Optional.
(d) HOOK FLASH. Optional.
(e) CLEAR FROM MS.
(f) CALL CELL TO MS.
(g) AUTO HANDOFF.
(h) CLEAR FROM CELL.

CALL AND RF TESTING sequence

As well as performing the CALL PROCESSING ONLY test routines, this also measures the pertinent RF parameters on all of the channels which have been selected in the **SYSTEM PARAMETERS MENU**. It is intended to be used by workshops for first-line testing. This sequence can also be performed using only the RF connection. The sequence of test routines is as follows:-

(a) REGISTRATION.
(b) CALL MS TO CELL.
(c) DTMF TONES. Optional.
(d) HOOK FLASH. Optional.
(e) CLEAR FROM MS.
(f) CALL CELL TO MS.
(g) HANDOFF.) These are
(h) TX POWER.) repeated for
(j) TX FREQUENCY.) each selected
(k) SAT or DSAT DEVIATION.) channel.
(m) CLEAR FROM CELL.

BRIEF TESTING sequence

This performs some of the standard transceiver test routines in addition to the routines in the CALL AND RF TESTING sequence. It is intended for use by small workshops and regional service centres as their main test facility.

Test routines are performed on three voice channels. The first voice channel is that selected in the **SYSTEM PARAMETERS MENU**; the second and third are determined by the HANDOFF INCREMENT. It is necessary to connect the audio paths between the mobile and the handset to the test system for this sequence as well as from the mobile's antenna to the RF IN/OUT N socket. The sequence of test routines is as follows:-

(a) REGISTRATION.
(b) CALL MS TO CELL.
(c) DTMF TONES. Optional.
(d) HOOK FLASH. Optional.
(e) CLEAR FROM MS.
(f) CALL CELL TO MS.
(g) HANDOFF.)
(h) TRANSPONDED SAT or DSAT.)
(j) SAT FREQUENCY.)
(k) TX POWER.) These are
(m) TX FREQUENCY.) repeated
(n) TX DISTORTION (SINAD).) for three
(p) TX LIMITING.) channels.
(q) RX DISTORTION (SINAD).)
(r) RX SENSITIVITY.)
(s) CLEAR FROM CELL.

COMPREHENSIVE TESTING sequence

This is intended for major service centres and manufacturers who wish to test more of the mobile's operational aspects. All of the connections which are shown in Fig. 3-1 are required for this test sequence. The sequence of test routines is as follows:-

(a) REGISTRATION.
(b) CALL MS TO CELL.
(c) DTMF TONES. Optional.
(d) HOOK FLASH. Optional.
(e) CLEAR FROM MS.
(f) CALL CELL TO MS.
(g) BIT ERROR RATE (wideband only).
(h) HANDOFF.)
(j) TRANSPONDED SAT or DSAT.)
(k) TX POWER.)
(m) DC POWER.)
(n) TX FREQUENCY.) These are
(p) TX DISTORTION (SINAD).) repeated
(q) TX NOISE (wideband only).) for each
(r) TX LIMITING.) selected
(s) TX COMPRESSION.) channel.
(t) RX DISTORTION SINAD).)
(u) RX SENSITIVITY.)
(v) RX EXPANSION.)
(w) CLEAR FROM CELL.
(x) DC POWER.

NON-SYSTEM SPECIFIC TEST ROUTINES

The test routines which are not specific to AMPS are described below together with any applicable error messages and their meanings. When performing transmitter test routines (no. 1 to no. 5), the 2960 automatically adjusts the audio generator output level in order to excite the mobile at the required nominal deviation. If it cannot get a settled reading of this deviation, the test routine is failed and READING UNSTABLE is reported in the result field. This is normally due to one of the two following causes:-

(a) The microphone in the mobile under test is still live and ambient noise is causing the reading to be unstable. This situation should be avoided as it degrades an otherwise good SINAD or distortion measurement.

(b) The corresponding audio generator level is such that the setting resolution is greater than the tolerance of deviation being set (e.g. at 9 mV, with steps of 1mV, gives a setting resolution of 11% which is greater than the acceptance tolerance of ±5%). To rectify this, an attenuator should be inserted to bring the required level above 10 mV.

When performing transmitter limiting test routines, the audio generator output level is adjusted to obtain the nominal deviation. The output level is then increased by an overload factor of 20 dB. If this new level exceeds the maximum output level of the audio generator (2.5 V for a 2955 or 4.0 V for a 2955A, 2955R or 2955B), then the test routine is failed and the message LOW SENS MIC I/P is displayed. Normally, 250 mV is sufficient to excite a mobile. A low output level could be due to a mismatch, typically a balanced input. In this case, a balun transformer could be used to balance the output of the 2960 and also provide voltage gain.

The effective dynamic range of the audio generator output is 20 log (maximum output level / 10mV) = 48 dB (2955) or 52 dB (2955A, 2955R or 2955B). As the required dynamic range is 20 dB, the ideal value for the output level is 10 mV + 14 dB = 50 mV (2955) or 10 mV + 16 dB = 63 mV (2955A, 2955R or 2955B).

Assuming that the mobile has an input impedance of greater than 1 kΩ, see Fig. 3-26 for suitable resistance values to obtain approximate attenuations.

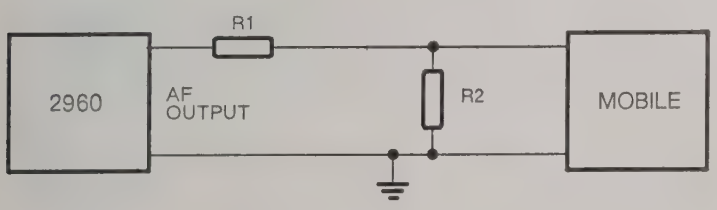

Attenuation	R1	R2
3 dB	33 Ω	68 Ω
6 dB	50 Ω	50 Ω
10 dB	68 Ω	33 Ω
20 dB	91 Ω	10 Ω

Fig. 3-26 AF generator output attenuator

Test routine no. 1 - Transmitter RF power (TX POWER)

Measures the RF power. This is not used in the standard test sequences since the CALL AND RF TESTING, BRIEF TESTING and COMPREHENSIVE TESTING sequences use the system specific power test routine which sets the mobile to the required power levels before measuring. Messages are as follows:-

(a) *FAIL* NO TX POWER. Power <1 mW. Probably there is no carrier so a very low power level is not displayed.
(b) *FAIL* READING UNSTABLE. After 15 attempts, could not obtain two consecutive readings within 20%.

Test routine no. 2 - Transmitter RF frequency (TX FREQUENCY)

First ensures that a carrier is present and then auto-tunes to measure the RF frequency. For cellular radios, then manually retunes to the correct channel. Messages are as follows:-

(a) *FAIL* NO TX POWER. Power <1 mW. Assumes there is no carrier so cannot take meaningful frequency measurement.
(b) *FAIL* READING UNSTABLE. Frequency not within 1% after 15 readings.

Test routine no. 3 - Transmitter AF distortion (TX DISTORTION), **transmitter SINAD** (TX SINAD), **transmitter S/N** (TX S/N) **and transmitter residual noise** (TX NOISE)

Attempts to set the AF level to produce a reference modulation level (but not for the residual noise test routine). Routes the 2960 demodulated signal to the AF INPUT of the 2955 and tests audio as for receiver distortion and SINAD. S/N is measured by reading the demodulated level with and without a modulating signal. Residual noise measurement is deviation of the carrier in the absence of a modulating signal. Messages are as follows:=

(a) *FAIL* LOW DEMOD LEVEL. 2960 internal demodulated level <100 mV either due to 2960 fault or reference modulation level is too low to produce 100 mV demodulated.
(b) *FAIL* READING UNSTABLE. Demodulated level not within 10% after 15 readings.
(c) *FAIL* READING UNSTABLE. Demodulated noise level not within 100% after 15 readings.
(d) *FAIL* READING UNSTABLE. Distortion etc not within 20% after 5 readings.
(e) *FAIL* READING UNSTABLE. Residual noise not within 50% after 10 readings.
(f) AF GEN RESOLUTION ERROR. (Displayed in reverse video at the bottom of the screen). Audio generator output level is below 10 mV. This means that, with steps of 1 mV, it may not be possible to set the required deviation to within ±5%.

Test routine no. 4 - Transmitter modulation limiting (TX LIMITING)

Attempts to set an AF level to produce a reference modulation level, then increases the AF level by the overload factor and measures the resulting deviation in a 15 kHz bandwidth (including de-emphasized SAT). Messages are as follows:-

(a) *FAIL* LOW SENS MIC I/P. AF level required to set the transmitter to reference modulation level was too high to overload by the factor given.
(b) *FAIL* NO MODULATION. Deviation <100 Hz/1%/0.1 rad measured.
(c) *FAIL* READING UNSTABLE. Deviation not within 10% after 5 readings.

Test routine no. 5 - Transmitter modulation compression (TX COMPRESSION).

Attempts to set an AF level to produce a reference modulation level, then alters the AF level by +10 dB and -10 dB. Measurement is resulting change in modulation level. Result is (20 dB) / (modulation level change in dB). Messages are as follows:-

(a) *FAIL* LOW DEMOD LEVEL. Demodulated level is below 100 mV. (Demodulated level is reference level + compressed 10 dB change.)
(b) *FAIL* LOW DEMOD LEVEL. Demodulated level is below 10 mV. (Demodulated level is reference level - compressed dB change.)
(c) *FAIL* READING UNSTABLE. Demodulated level not within 10% after 15 readings.
(d) *FAIL* NO MODULATION. ±10 dB change in AF generator output produced <1 dB change in transmitter modulation.
(e) *FAIL* LOW SENS MIC I/P. Cannot modulate to reference level +10 dB (i.e. >2.5 V for a 2955 or >4.0 V for a 2955A, 2955R or 2955B).
(f) AF GEN RESOLUTION ERROR. (Displayed in reverse video at the bottom of the screen). Audio generator output level is below 10 mV. This means that, with steps of 1 mV, it is not possible to set the required deviation to within ±5%.

Note...

When conducting receiver tests, it is necessary to have a recovered audio signal level of >5 mV, corresponding to the required deviation (i.e. 8.0 kHz). Otherwise, the SINAD/distortion measurement may not be accurate. If the recovered level is below 50 mV, then either a fault exists in the interface circuit or there is a gross mismatch. Where there is a balanced output, this may be rectified by using a balun transformer or the Marconi Instruments 600 Ω accessory.

Test routine no. 6 - Receiver AF distortion (RX DISTORTION), **receiver SINAD** (RX SINAD) and **receiver S/N** (RX S/N)

Sets modulation level directly and measures distortion, SINAD and S/N directly on 2955 through x20 amplifier. 2960 AF IN (mobile's receiver audio) is routed to the 2955 AF IN. Messages are as follows:-

(a) *FAIL* LOW DEMOD LEVEL. Receiver audio level <5 mV (100 mV on display).
(b) *FAIL* READING UNSTABLE. Distortion etc not within 20% after 5 readings.
(c) AF GEN RESOLUTION ERROR. (Displayed in reverse video at the bottom of the screen). Audio generator output level is below 10 mV. This means that, with steps of 1 mV, it may not be possible to set the required deviation to within ±5%.

Test routine no. 7 - Receiver sensitivity (RX SENSITIVITY)

Attempts to adjust the receiver level until the mobile's receiver audio produces the reference SINAD reading required. Result is the RF level. Messages are as follows:-

(a) *FAIL* LOW DEMOD LEVEL. Receiver audio level <5 mV (100 mV on display).
(b) *FAIL* NO DEMODULATION. Reached receiver level limit at -95 dBm or -122 dBm without reaching reference SINAD level.
(c) *FAIL* READING UNSTABLE. SINAD not within 20% after 5 readings and 10 iterations of setting level.

Test routine no. 8 - Receiver demodulation expansion (RX EXPANSION)

Sets receiver modulation level directly to reference level -5 dB and +5 dB. Measurement is resulting change in receiver audio level in dB. Result is (audio level change in dB) / (10 dB).

(a) *FAIL* LOW DEMOD LEVEL. Demodulation level <5 mV (reference level -5 dB).
(b) *FAIL* LOW DEMOD LEVEL. Demodulation level <5 mV (reference level +5 dB).
(c) *FAIL* READING INSTABLE. Demodulation not within 10% after 15 readings.
(d) ERROR: MODULATION LIMIT. Cannot modulate to reference level +5 dB.

Test routine no. 9 - DC power consumption (DC POWER)

Routes voltages corresponding to DCV/25 and DCA/10 to 2955; measures DC voltages and calculates power. Messages are as follows:-

(a) *FAIL* NO DC POWER. <250 mV or <100 mA or <100 mW.
(b) *FAIL* READING UNSTABLE. Not within 10% after 15 readings.

Test routines no. 10 to no. 19

Not implemented.

SYSTEM SPECIFIC TEST ROUTINES

The test routines which are specific to AMPS are described below together with any applicable error messages and their meanings.

Test routine no. 20 - Registration of mobile on control channel (REGISTRATION)

This test routine checks the mobile's ability to register on the system. Operation is as follows:-

(1) The test routine title is displayed and the 2960 initializes the data generation system as a control channel.

(2) The 2960 generates an FCC for the mobile to lock onto. The FCC number is shown on the display.

(3) If the mobile cannot lock onto the control channel, the 2960 tries again in other systems (independent provider or local company). The message *FAIL* NO RESPONSE means that there is no response or CRTS is aborted.

(4) The mobile locks onto the FCC and sends registration updating messages with the MIN, ESN and SCM (hexadecimal for N-AMPS only).

(5) The 2960 checks the received data and displays the MIN and PASSED for a good test. Failure messages are as follows:-

(a) *FAIL* DATA INCOMPLETE. Not all of the message was received.
(b) *FAIL* DATA CORRUPT. The message was corrupted.
(c) *FAIL* DATA CORRECTED. A bit error has been corrected.
(d) *FAIL* DATA IGNORED. There were insufficient correct repetitions.
(e) *FAIL* TOO MANY WORDS. The message was longer than the format.
(f) *FAIL* WRONG RESPONSE. The response was wrong for the message which was sent.

Test routine no. 21 - Call placement from cell to mobile (CALL CELL TO MS)

This test routine checks the mobile's ability to answer an incoming call. The number called is the currently stored MIN. Operation is as follows:-

(1) The test routine title is displayed.

(2) The 2960 generates an FCC for the mobile to lock onto. PAGING MS is displayed and the mobile is paged every 2 seconds. The message *FAIL* NO RESPONSE means that no response was received within 30 seconds.

(3) The mobile locks onto the FCC and responds with data.

(4) The 2960 checks the received data. Failure messages are as follows:-

(a) *FAIL* DATA INCOMPLETE. Not all of the message was received.
(b) *FAIL* DATA CORRUPT. The message was corrupted.
(c) *FAIL* DATA CORRECTED. A bit error has been corrected.
(d) *FAIL* DATA IGNORED. There were insufficient correct repetitions.
(e) *FAIL* TOO MANY WORDS. The message was longer than the format.
(f) *FAIL* WRONG RESPONSE. The response was wrong for the message which was sent.

(5) The 2960 checks the SCM. Failure messages are as follows:-

(a) ERROR: 666 CHANNEL MS. An attempt was made to access a channel beyond the mobile's capability.
(b) ERROR: N-AMPS CHANNEL. An attempt was made to access a narrowband channel on a wideband mobile.

(6) The 2960 assigns and displays the first voice channel (e.g. VC ASSIGN CH 001).

(7) The mobile tunes to the voice channel and then switches on the SAT or DSAT.

(8) The 2960 checks for the carrier and displays CARRIER ON or the message *FAIL* NO CARRIER. The failure message means that there was no carrier >100 mW within 5 seconds.

(9) The 2960 sends the alerting order.

(10) The mobile responds by switching on the ST or DST.

(11) The 2960 checks for the signalling tone. The message *FAIL* NO SIGNAL TONE means that no signalling tone was received within 3 seconds.

(12) The mobile rings and PLEASE WAIT is displayed flashing. At this time, the 2960 is measuring the ST deviation which can be displayed later on request.

(13) The mobile rings and ANSWER CALL flashes on the display.

(14) The user either picks up the handset or presses the SEND key, depending upon the audio connections. The ST or DST stops and CONVERSATION appears on the display together with PASSED for a successful test.

Test routine no. 22 - Call placement from mobile to cell (CALL MS TO CELL)

This checks the mobile's ability to place a call. Operation is as follows:-

(1) The test routine title is displayed together with WAIT FOR SERVICE.

(2) After 2 seconds, WAIT FOR SERVICE is replaced by PLACE CALL flashing.

(3) The 2960 waits for a response. The message *FAIL* NO RESPONSE means that no response was received within 40 seconds.

(4) The user keys a number (up to 32 digits, only 16 being shown in a summary display) into the handset and presses the SEND key. The mobile sends the MIN, the ESN and the called number.

(5) The 2960 checks the received data. Messages are as follows:-

(a) *FAIL* DATA INCOMPLETE. Not all of the message was received.
(b) *FAIL* DATA CORRUPT. The message was corrupted.
(c) *FAIL* DATA CORRECTED. A bit error has been corrected.
(d) *FAIL* DATA IGNORED. There were insufficient correct repetitions.
(e) *FAIL* TOO MANY WORDS. The message was longer than the format.
(f) *FAIL* WRONG RESPONSE. The response was wrong for the message which was sent.

(6) The 2960 checks the SCM. Failure messages are as follows:-

(a) ERROR: 666 CHANNEL MS. An attempt was made to access a channel beyond the mobile's capability.
(b) ERROR: N-AMPS CHANNEL. An attempt was made to access a narrowband channel on a wideband mobile.

(7) The 2960 assigns and displays the first voice channel (e.g. VC ASSIGN CH 001).

(8) The mobile tunes to the voice channel.

(9) The 2960 checks for the carrier and displays CARRIER ON or the message *FAIL* NO CARRIER. The failure message means that there was no carrier >100 mW within 5 seconds.

(10) The 2960 switches on the SAT and displays the dialled number with PASSED or the message *FAIL* NO CARRIER. The failure message means that no carrier is present.

(11) The 2960 checks for the signalling tone. The message *FAIL* NO RESPONSE means that no response was received within 500 ms.

Test routine no. 23 - Handoff from current to chosen voice channel (HANDOFF)

This checks the mobile's ability to retune to another voice channel (which has been selected by the user under the **CHANGE FORMAT MENU**) while in the CONVERSATION mode (e.g. from channel 001 to 666 by an increment of 333). Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation. The message ERROR: NO VOICE CHANNEL means that the previous call placement has failed.

(2) The 2960 checks the SCM. Failure messages are as follows:-

(a) ERROR: 666 CHANNEL MS. An attempt was made to access a channel beyond the mobile's capability.
(b) ERROR: N-AMPS CHANNEL. An attempt was made to access a narrowband channel on a wideband mobile.

(3) The 2960 assigns and displays the first voice channel (e.g. VC ASSIGN CH 001).

(4) The 2960 waits for handoff message confirmation. The message *FAIL* NO SIGNAL TONE means that no ST was received within 3 seconds. The message *FAIL* NO RESPONSE (N-AMPS narrowband channel only) means that no confirmation message was received within 5 seconds.

(5) The mobile sends the ST or DST.

(6) The 2960 waits for the mobile's carrier on the new channel. The message *FAIL* NO CARRIER means that a carrier >100 mW was not received within 5 seconds.

(7) The mobile tunes to the new voice channel.

(8) The 2960 confirms successful handoff (e.g. CH 001 >CH301).

(9) The 2960 checks the ST duration if applicable and displays PASSED for a good test. The message *FAIL* SIGNAL TONE DURATION means that the duration was not 50 ms ±5 ms or ±10%.

Test routine no. 24 - Automatic handoffs from first to last voice channel (AUTO HANDOFF)

This test routine is based on no. 23. However, the mobile steps from the first channel by the channel increment until the last channel is reached or exceeded (from channel 001 to 666 by an increment of 333). Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation. The message ERROR: NO VOICE CHANNEL means that the previous call placement has failed.

(2) The 2960 checks the SCM. Failure messages are as follows:-

(a) ERROR: 666 CHANNEL MS. An attempt was made to access a channel beyond the mobile's capability.
(b) ERROR: N-AMPS CHANNEL. An attempt was made to access a narrowband channel on a wideband mobile.

(3) The 2960 assigns and displays the first voice channel (e.g. VC ASSIGN CH 001).

(4) The 2960 waits for handoff message confirmation. The message *FAIL* NO SIGNAL TONE means that no ST was received within 3 seconds. The message *FAIL* NO RESPONSE (N-AMPS narrowband channel only) means that no confirmation message was received within 5 seconds.

(5) The mobile sends the ST or DST.

(6) The 2960 waits for the mobile's carrier on the new channel. The message *FAIL* NO CARRIER means that a carrier >100 mW was not received within 5 seconds.

(7) The mobile tunes to the new voice channel.

(8) The 2960 confirms successful handoff (e.g. CH 001 >CH201).

(9) The handoff is repeated for channels 401 and 600.

(10) The 2960 checks the ST if applicable and displays PASSED for a good test. The message *FAIL* SIGNAL TONE DURATION means that the duration was not 50 ms ±5 ms or ±10%.

Test routine no. 25 - SAT or DSAT transponding
(TRANSPONDED SAT or TRANSPONDED DSAT)

This test routine measures the SAT frequency and deviation. Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation. The message ERROR: NO VOICE CHANNEL means that the previous call placement has failed.

(2) The 2960 tests SAT or DSAT for transponding and SAT DETECTED or DSAT DETECTED is displayed. The message *FAIL* NO SAT DETECTED or *FAIL* NO DSAT DETECTED means that the SAT or DSAT was not detected.

(3) If required, the SAT or DSAT deviation is checked. SAT DEVIATION or DSAT DEVIATION is displayed.

(4) The 2960 takes an average of 8 measurements and PASSED is displayed for a good test. The message *FAIL* READING UNSTABLE means that the measurements are <100 mV or differ by >2%.

(5) If required, the SAT frequency is checked. SAT FREQUENCY is displayed. For the N-AMPS system, this measurement is not applicable to narrowband type channels. DSAT DETECTED is displayed instead of a frequency.

(6) The 2960 takes an average of 8 measurements and PASSED is displayed for a good test. The message *FAIL* READING UNSTABLE means that the measurements are <1.000 kHz or differ by >1%.

Test routine no. 26 - Clearing down from cell (CLEAR FROM CELL)

This test routine is the final one in all four built-in test sequences. It is similar to no. 27 except that it checks whether the mobile can acknowledge a call termination by the other party. Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation tests. The message ERROR: NO VOICE CHANNEL means that the previous call placement has failed.

(2) ORDER RELEASE is displayed and the 2960 sends the clearing order and waits for a response. The message *FAIL* NO SIGNAL TONE means that no ST was received within 20 seconds. The message *FAIL* NO RESPONSE (N-AMPS narrowband channel only) means that no response was received within 20 seconds. The message *FAIL* WRONG RESPONSE (N-AMPS narrowband channel only) means that an incorrect response message was received.

(3) The mobile sends the ST or DST.

(4) When the ST is received, SIGNAL TONE is displayed. When the ST ends or a response message is received, CLEARED DOWN is displayed.

(5) The 2960 checks the ST duration if applicable and PASSED is displayed for a good test. The message *FAIL* SIGNAL TONE DURATION means that the ST duration was not 1.8 s ±50 ms or ±10%.

Test routine no. 27 - Clearing down from mobile (CLEAR FROM MS)

This test routine checks the mobile's ability to terminate the call which it has made in the previous test. Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation. The message ERROR: NO VOICE CHANNEL means that the previous call placement has failed.

(2) END CALL flashes and the 2960 waits for a response. The message *FAIL* NO SIGNAL TONE means that no ST was received within 20 seconds. The message *FAIL* NO RESPONSE (N-AMPS narrowband channel only) means that no response was received within 20 seconds. The message *FAIL* WRONG RESPONSE (N-AMPS narrowband channel only) means that an incorrect response message was received.

(3) The user replaces the handset or presses the END key.

(4) The mobile sends the ST or DST.

(5) When the ST is received, SIGNAL TONE is displayed. When the ST ends, CLEARED DOWN is displayed.

(6) The 2960 checks the ST duration if applicable and PASSED is displayed for a good test. The message *FAIL* SIGNAL TONE DURATION means that the ST duration was not 1.8 s ±50 ms or ±10%.

Test routine no. 28 - Mobile transmitter RF power (TX POWER)

This test routine checks up to all eight of the mobile's RF power levels. Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation tests. The message ERROR:NO VOICE CHANNEL means that the previous call placement has failed.

(2) The 2960 instructs the mobile to set a power level and then waits for a response. The power level number appears on the display. The message *FAIL* NO RESPONSE means that no response was received within 700 ms.

(3) The mobile acknowledges and then sets the power level.

(4) The 2960 decodes the response. Messages are as follows:-

(a) *FAIL* DATA INCOMPLETE. Not all of the message was received.
(b) *FAIL* DATA CORRUPT. The message was corrupted.
(c) *FAIL* DATA CORRECTED. A bit error has been corrected.
(d) *FAIL* DATA IGNORED. There were insufficient correct repetitions.
(e) *FAIL* TOO MANY WORDS. The message was longer than the format.
(f) *FAIL* WRONG RESPONSE. The response was wrong for the message which was sent.

(5) The 2960 takes an average of 4 measurements of the mobile's power level with reference to its SCM. The message *FAIL* READING UNSTABLE means that the measurements are <1 mW or differ by >2%.

(6) If required, the 2960 instructs the mobile to reset the power level and then takes another measurement.

(7) PASSED is displayed for a good test. The message *FAIL* x.xxW means that the power level is outside limits.

Test routine no. 29 - Data performance (BIT ERROR RATE)

For the N-AMPS system, this test routine is not applicable to narrowband type channels.

This test routine checks the accuracy of the mobile's data reception under low level conditions. Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation. The message ERROR: NO VOICE CHANNEL means that the previous call placement has failed.

(2) The 2960 checks the RF generator level parameter. Messages are as follows:-

(a) ERROR: PARAMETER RANGE. The level was outside the parameter range.
(b) ERROR: PARAMETER UNITS. The level was not in dBm.

(3) The 2960 sets the RF generator level and then checks the bit error rate lower limit parameter. Messages are as follows:-

(a) ERROR: PARAMETER RANGE. The level was outside the parameter range.
(b) ERROR: PARAMETER UNITS. The level was not in % units.

(4) The 2960 sends an audit order to the mobile and waits for a confirmation message.

(5) The 2960 waits for the SAT to be transponded. The message *FAIL* SAT DROPOUT means that no SAT was detected within 3 seconds.

(6) The 2960 checks for response and logs success.

(7) The 2960 checks 10 times for any response. If no response is received, the test is aborted. Otherwise, the test repeats from (4) another 90 times. The message *FAIL* NO RESPONSE means that there was no response after 10 tests.

(8) After 100 successful tests, PASSED is displayed together with the % bit error rate. The message *FAIL* xxx% means that the percentage pass was outside the limit.

Test routine no. 30 - DTMF tones (DTMF TONES)

This test routine checks the mobile's ability to generate DTMF tones at the correct frequency. This is optional and has to be enabled or disabled under the **TEST SEQUENCE MENU**. Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation. The message ERROR: NO VOICE CHANNEL means that the previous call placement has failed.

(2) The 2960 checks that this test routine is enabled. The message ERROR: NOT ENABLED means that it is not.

(3) WAITING FOR TONES is displayed and the 2960 waits for the tones. The message *FAIL* NO RESPONSE means that no tones were received within the time limit.

(4) On the handset, the user presses the number, * and # keys. This transmits tone pairs with each key press. These can be heard when the volume is turned up.

(5) The data symbols are displayed (i.e. 1 2 3 4 5 6 7 8 9 0 * #) for confirmation sequentially as they are received.

(6) The user checks the symbols for accuracy and then presses CONTINUE. This causes PASSED to appear on the display.

Test routine no. 31 - Hook flash (HOOK FLASH)

This test routine checks the mobile's ability to send a hook flash signalling tone of the correct duration and interrogates the mobile for the hook flash data. This is optional and has to be enabled or disabled under the **TEST SEQUENCE MENU**. Operation is as follows:-

(1) The test routine title is displayed and the 2960 checks that the mobile is in conversation. The message ERROR: NO VOICE CHANNEL means that the previous call placement has failed.

(2) The 2960 checks that this test routine is enabled. The message ERROR: NOT ENABLED means that it is not.

(3) The 2960 requests the user to send flash and waits for the signalling tone. The message *FAIL* NO SIGNAL TONE means that there was no ST. The message *FAIL* NO RESPONSE (N-AMPS narrowband channel) means that there was no flash message within 40 seconds.

(4) On the handset, the user enters numerical data and then presses the SEND key. An ST (except N-AMPS narrowband channel) or data message (N-AMPS narrowband channel) is transmitted. This can be heard when the volume is turned up.

(5) The 2960 receives the ST or message and instructs the mobile to send the called address.

(6) The called address is displayed for confirmation. Messages are as follows:-

(a) *FAIL* DATA INCOMPLETE. Not all of the message was received.
(b) *FAIL* DATA CORRUPT. The message was corrupted.
(c) *FAIL* DATA CORRECTED. A bit error has been corrected.
(d) *FAIL* DATA IGNORED. There were insufficient correct repetitions.
(e) *FAIL* TOO MANY WORDS. The message was longer than the format.
(f) *FAIL* WRONG RESPONSE. The response was wrong for the message which was sent.
(g) *FAIL* NO RESPONSE. No message received.

(7) The 2960 checks the ST duration if applicable and PASSED is displayed for a good test. The message *FAIL* SIGNAL TONE DURATION means that the ST duration was not 400 ms ±50 ms or ±10%.

Test routine no. 32 - Data deviation (DATA DEVIATION)

For the N-AMPS system, this test routine is not applicable to narrowband type channels. This test routine is used to measure the mobile's data deviation while it is in conversation. A reference level of 8.0 kHz is used with a maximum error which has a default value of 10%. The maximum error parameter can be specified in % or Hz. This is checked for valid units and range. Operation is as follows:-

(1) Upon initialization, the test routine title is displayed and a check is made to ensure that the mobile is in conversation. If not, the message NO VOICE CHANNEL is displayed and the test routine is terminated.

(2) The maximum error parameter is checked to see that it has the correct units and is within the correct range (0 to 100% or 0 to 8.0 kHz). If not, the message PARAMETER UNITS or PARAMETER RANGE is displayed and the test routine is terminated.

(3) The 2960 sends an audit order to the mobile. The deviation of the mobile's response is then measured. If there is no response from the mobile, the message NO RESPONSE is displayed and the test routine is terminated.

(4) Provided the measurement was successful, the result is displayed and the test routine is passed if it is within the specified limits. If the measurement was not successful, the message BELOW THRESHOLD or READING UNSTABLE is displayed. Possible messages are as follows:-

(a) PASSED x.xxkHz ±xxxHz.
(b) PASSED x.xxkHz ±xx%.
(c) ERROR: PARAMETER UNITS.
(d) ERROR: PARAMETER RANGE.
(e) *FAIL* NO RESPONSE.
(f) *FAIL* BELOW THRESHOLD.
(g) *FAIL* READING UNSTABLE.
(h) *FAIL* x.xxkHz ±xxxHz.
(j) *FAIL* x.xxkHz ±xx%.
(k) *FAIL* TEST ABORTED.

Test routine no. 33 - Signalling tone deviation (ST DEVIATION)

This test routine is used to measure the mobile's signalling deviation. To obtain a valid result, it has to follow a test routine no. 21 because the deviation is measured and stored while the mobile is ringing in the test routine no. 21. A reference level of 8.0 kHz is used with a maximum error which has a default value of 10%. The maximum error parameter can be specified in % or Hz. This is checked for valid units and range. Operation is as follows:-

(1) Upon initialization, the test routine title is displayed.

(2) The maximum error parameter is checked to see that it has the correct units and is within the correct range (0 to 100% or 0 to 8.0 kHz). If not, the message PARAMETER UNITS or PARAMETER RANGE is displayed and the test routine is terminated.

(3) A check is made to see that a valid ST deviation reading has been taken. If not, the message NO READING is displayed and the test routine is terminated.

(4) Provided the measurement was successful, the result is displayed and the test routine is passed if it is within the specified limits. Possible messages are as follows:-

(a) PASSED x.xxkHz ±xxxHz.
(b) PASSED x.xxkHz ±xx%.
(c) ERROR: PARAMETER UNITS.
(d) ERROR: PARAMETER RANGE.
(e) *FAIL* NO READING.
(f) *FAIL* x.xxkHz ±xxxHz.
(g) *FAIL* x.xxkHz ±xx%.
(h) *FAIL* TEST ABORTED.

Test routine no. 34 - Signalling tone duration (ST DURATION)

This test routine is used to measure the duration of the mobile's signalling tone. To obtain a valid result, it has to follow a test routine no. 23, 24, 26, 27 or 31 because the ST duration is measured and stored during these test routines. The reference duration is dependent on the test routine as follows:-

Test routine no.	Test type	Reference duration
23	Handoff	50 ms
24	Automatic handoff	50 ms
26	Clear from cell	1.8 s
27	Clear from mobile	1.8 s
31	Hook flash	400 ms

A maximum error is used. In all cases, it has a default value of 10%. The maximum error parameter can be specified in % or Hz. This is checked for valid units and range. Operation is as follows:-

(1) Upon initialization. the test routine title is displayed.

(2) The maximum error parameter is checked to see that it has the correct units and is within the correct range (0 to 100% or 0 to 10 s. If not, the message PARAMETER UNITS or PARAMETER RANGE is displayed and the test routine is terminated.

(3) A check is made to ensure that a valid ST duration reading has been taken. If not, the message NO READING is displayed and the test routine is terminated.

(4) Provided the measurement was successful, the result is displayed and the test routine is passed if it is within the specified limits. Possible messages are as follows:-

(a) PASSED xx.xs ±x.xs.
(b) PASSED xx.xs ±xx%.
(c) ERROR: PARAMETER UNITS.
(d) ERROR: PARAMETER RANGE.
(e) *FAIL* NO READING.
(f) *FAIL* xx.xs ±x.xs.
(g) *FAIL* xx.xs ±xx%.
(h) *FAIL* TEST ABORTED.

Test routines no. 35 to no. 39

Not implemented.

MARCONI INSTRUMENTS WORLDWIDE ORGANISATIONS

Marconi Instruments Limited
Service Unit
The Airport
Luton
Beds, England LU2 9NS
Telephone: (+44) 582 33866
Fax: (+44) 562 417573
Telex: 825248 MARCON G

Head Office

Marconi Instruments Limited
Longacres
St. Albans
Herts, England AL4 0JN
Telephone: (+44) 727 59292
Fax: (+44) 727 57481
Telex: 23350 MARCON G
(ATE Systems)
Fax: (+44) 727 839447
Telex: 297221 MARCON G

Australia

Marconi Instruments (Pty) Limited
P.O. Box 1390
Level 4
15 Orion Road Lane Cove
N.S.W. 2066
Telephone: (02) 418 6044
Fax: (02) 418 6383

France

Marconi Instruments S.A.
18 rue du Plessis-Brlard
le Canal
Courcouronnes
91023 Evry Cedex
Telephone: (1) 60 77 90 66
Fax: (1) 60 77 69 22
Telex: 604 482

Germany

Marconi Messtechnik GmbH
Landsberger Strasse 65
8034 Germering
Telephone: 089 84936 0
Fax: 089 8419142
Telex: 5212642 MMMC D

Hong Kong

Marconi Instruments Limited
Rm 702-3 CC Wu Building
302-306 Hennessy Road
Wanchai
Telephone: 8327988
Fax: 8345364
Telex: 72369 MINST HX

Netherlands

Marconi Instrumenten
Van Limburg Stirumlaan 4
5037 SK Tilburg
Postbus 645
5000 AP Tilburg
Telephone: 013 63 95 40
Fax: 013 63 96 63

Spain

Marconi Instrumentos S.A.
Calle de Gobelas 13
Urbanizacion "La Florida"
28023 Madrid
Telephone: 372 98 75
Fax: 307 69 39
Telex: 57481 MIES E

U.S.A.

Marconi Instruments Inc.
3 Pearl Court
Allendale
New Jersey 07401
Telephone: 201 934 9050
Toll Free: 1 800 233 2955
Fax: 201 934 9229

Marconi
Instruments

MP MASTER
MA31140